


# MAC 700 Profile

user manual



# Dimensions

All measurements are expressed in millimeters

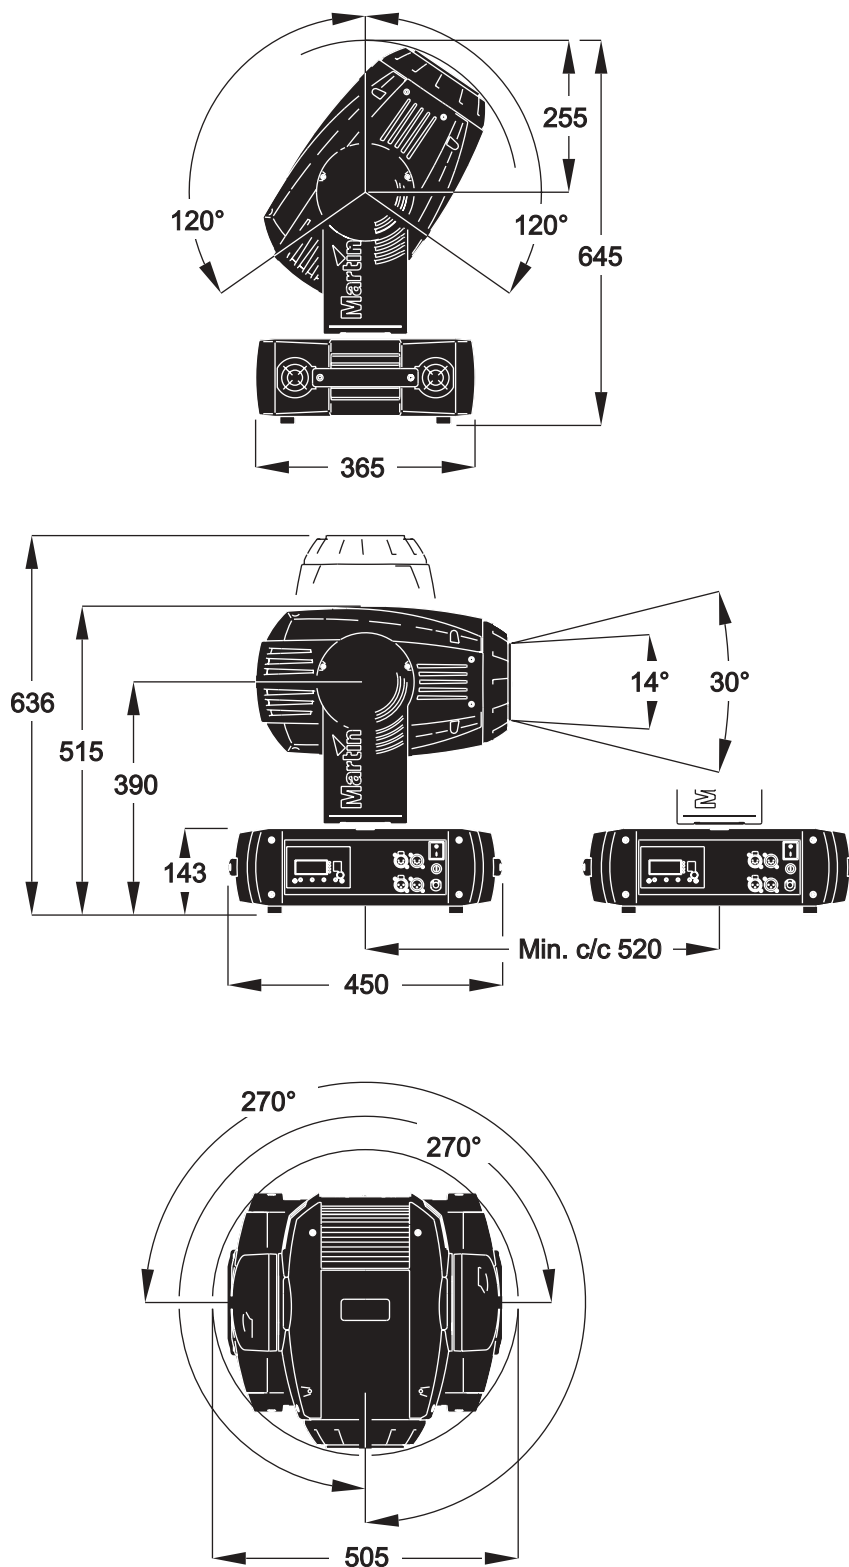

# Contents

|                                                 |    |
|-------------------------------------------------|----|
| Introduction .....                              | 5  |
| Safety information .....                        | 5  |
| Unpacking .....                                 | 6  |
| Using for the first time .....                  | 6  |
| AC power .....                                  | 7  |
| Power supply and main fuse .....                | 7  |
| Power connection .....                          | 7  |
| Lamp .....                                      | 8  |
| About the discharge lamp .....                  | 8  |
| Lamp replacement .....                          | 8  |
| DMX data link .....                             | 10 |
| Tips for reliable data transmission .....       | 10 |
| Rigging .....                                   | 11 |
| Control panel .....                             | 12 |
| Menu navigation .....                           | 12 |
| DMX address and protocol .....                  | 12 |
| Tailoring performance .....                     | 12 |
| Readouts .....                                  | 13 |
| Service messages .....                          | 14 |
| Manual control .....                            | 14 |
| Service utilities .....                         | 14 |
| Effects .....                                   | 16 |
| Lamp power .....                                | 16 |
| Fixture reset .....                             | 16 |
| Dimming and strobe .....                        | 17 |
| Cyan, Magenta and Yellow .....                  | 17 |
| Color wheel .....                               | 17 |
| Rotating gobos .....                            | 17 |
| Static gobos .....                              | 17 |
| Gobo/color macros .....                         | 17 |
| Gobo animation .....                            | 17 |
| Prism and iris .....                            | 17 |
| Focus and zoom .....                            | 18 |
| Diffuser .....                                  | 18 |
| Pan and tilt .....                              | 18 |
| Pan/tilt speed and effects speed channels ..... | 18 |
| Optical configuration .....                     | 19 |
| Color wheel .....                               | 19 |
| Gobos .....                                     | 20 |
| Animation wheel .....                           | 22 |
| Diffuser .....                                  | 23 |
| Routine maintenance .....                       | 24 |
| Tilt lock .....                                 | 24 |
| Disassembly .....                               | 24 |
| Cleaning .....                                  | 26 |
| Lubrication .....                               | 27 |
| Software installation .....                     | 27 |
| MAC 700 Profile DMX protocol .....              | 29 |
| Control menu .....                              | 35 |
| Adjustment submenu .....                        | 39 |
| Control menu shortcuts .....                    | 40 |
| Service messages .....                          | 40 |
| Display messages .....                          | 41 |
| Troubleshooting .....                           | 42 |
| Circuit board connections .....                 | 43 |
| MAC 700 Profile Specifications .....            | 44 |



# Introduction

Thank you for selecting the Martin MAC 700 Profile. This moving-head spotlight features:

- 700 Watt short-arc high-output discharge lamp with hot restrike
- full-range mechanical dimmer/shutter
- full-spectrum CMY color mixing
- 8 color filters including two color temperature correction filters
- six rotating gobos with 16-bit position indexing
- nine static gobos
- interchangeable gobo animation wheel
- three-facet rotating prism
- iris
- variable focus and zoom
- 540° of pan and 246° of tilt
- electronic “flicker-free” ballast
- auto-sensing switch-mode power supply.

For the latest firmware updates, documentation, and other information about this and all Martin Professional products, please visit the Martin website at <http://www.martin.com>

Comments or suggestions regarding this document may be e-mailed to [service@martin.dk](mailto:service@martin.dk) or posted to:

Service Department  
Martin Professional A/S  
Olof Palmes Allé 18  
DK-8200 Aarhus N  
Denmark

**Warning!** *Read the safety precautions in this manual before installing and operating the fixture.*

## Safety information

**Warning!** *This product is for professional use only. It is not for household use.*

This product presents risks of lethal or severe injury due to fire and heat, electric shock, ultraviolet radiation, lamp explosion, and falls. **Read this manual** before powering or installing the fixture, follow the safety precautions listed below and observe all warnings in this manual and printed on the fixture. If you have questions about how to operate the fixture safely, please contact your Martin dealer or call the Martin 24-hour service hot line at +45 70 200 201.

### PROTECTION FROM ELECTRIC SHOCK

- Disconnect the fixture from AC power before removing or installing the lamp, fuses, or any part, and when not in use.
- Always ground (earth) the fixture electrically.
- Do not use the fixture with a damaged power cable or cord cap.
- Use only a source of AC power that complies with local building and electrical codes and has both overload and ground-fault (earth-fault) protection.
- Do not expose the fixture to rain or moisture.
- Refer any service operation not described in this manual to a qualified technician.

### PROTECTION FROM UV RADIATION AND LAMP EXPLOSION

- Do not operate the fixture with missing or damaged covers, shields, lenses or ultraviolet screens.

- Allow the fixture to cool for at least 45 minutes before opening the fixture or removing the lamp. Protect hands and eyes with gloves and safety glasses when handling lamps.
- Do not stare directly into the light. Never look at an exposed lamp while it is lit.
- Replace the lamp if it becomes visually deformed, damaged or in any way defective
- Replace the lamp before usage exceeds the maximum service life.

## PROTECTION FROM BURNS AND FIRE

**Danger!** *Intense heat. Avoid contact by persons and materials.*

***The exterior of the fixture can get very hot – up to 160° C (320° F). Allow the fixture to cool for at least 45 minutes before handling.***

***Prolonged exposure to an unshielded lamp can cause eye and skin burns.***

- Never attempt to bypass the thermostatic switch or fuses. Always replace defective fuses with ones of the specified type and rating.
- Keep all combustible materials (for example fabric, wood, paper) at least 0.5 meters (20 inches) away from the fixture. Keep flammable materials well away from the fixture.
- Do not illuminate surfaces within 1.2 meters (42 inches) of the fixture.
- Provide a minimum clearance of 0.1 meters (4 inches) around fans and air vents.
- Never place filters or other materials over the lens.
- The exterior of the fixture can get very hot. Allow the fixture to cool for at least 45 minutes before handling.
- Do not modify the fixture or install other than genuine Martin parts.
- Do not operate the fixture if the ambient temperature (Ta) exceeds 40° C (104° F).

## PROTECTION FROM INJURY DUE TO FALLS

- Do not lift or carry the fixture alone.
- When suspending the fixture, verify that the structure can hold at least 10 times the weight of all installed devices.
- Check that all external covers and rigging hardware are securely fastened and use an approved means of secondary attachment such as a safety cable.
- Block access below the work area and work from a stable platform whenever installing, servicing or removing the fixture.

## Unpacking

The MAC 700 Profile is packaged in either a cardboard box or a two-unit flight case that is designed to protect the product during shipment. The following items are included:

- OSRAM HTI 700/D4/75 lamp (installed)
- 2 clamp attachment brackets
- 5 extra metal gobos and one extra rotating gobo retaining spring
- this user manual
- one 6.3 AT fuse (installed) for use with 200 - 250 V AC power
- one 15 AT fuse for use with 100 -130 V AC power

## Using for the first time

Before applying power to the fixture,

- carefully review the safety information on page 5,
- check that the fuse in the fuseholder between the main on/off switch and the power cable matches the local AC power voltage as described in “Power supply and main fuse” on page 7.
- install a cord cap (mains plug) on the power cable as described in “Power connection” on page 7
- unlock the tilt lock as described on page 24.

When powered up, check lamp alignment as described on page 9.

# AC power

**WARNING!** For protection from electric shock, the fixture must be grounded (earthed). The AC mains supply must be fitted with a fuse or circuit breaker and ground-fault (earth-fault) protection.

**Important!** Check that the correct fuse is installed before applying power.

## Power supply and main fuse

The MAC 700 Profile features an auto-sensing switch-mode power supply that automatically adapts to 100-130 V and 200-250 V AC mains supplies. However, a suitable main fuse must be installed to match the local AC mains supply. The MAC 700 Profile is supplied with two main fuses:

- a 6.3 AT fuse (installed) for use with AC supplies of 200 - 250 volts
- a 15 AT fuse (packed with user manual) for use with AC supplies of 100 - 130 volts

To install the correct fuse:

1. Disconnect the fixture from AC power.
2. Remove the main fuse holder, which is located beneath the power switch.
3. For operation on 200 - 250 VAC supplies, install the 6.3 A fuse. For operation on 100 - 130 VAC supplies, install the 15 A fuse.

## Power connection

**Important!** Connect the MAC 700 Profile directly to AC power. Do not connect it to a dimmer system; doing so may damage the fixture.

You may need to install a cord cap (mains plug) that fits your supply on the power cable. A grounding-type (earthed) plug must be installed following the manufacturer's instructions. Table 1 shows some possible pin identification schemes; if the pins are not clearly identified, or if you have any doubts about proper installation, consult a qualified electrician.

To apply power, first verify that the head tilt locks are released and then set the power switch on the base to the "I" position.

| Wire Color   | Pin            | Symbol                                                                              | Screw (US)      |
|--------------|----------------|-------------------------------------------------------------------------------------|-----------------|
| brown        | live           | L                                                                                   | yellow or brass |
| blue         | neutral        | N                                                                                   | silver          |
| yellow/green | ground (earth) |  | green           |

**Table 1: Cord cap connections**

# Lamp

## About the discharge lamp

The MAC 700 Profile is designed for use with an OSRAM HTI 700 W/D4/75 lamp. This highly efficient double-ended short-arc source provides a color temperature of 7380 K, a color rendering index of 75, an average service life of 750 hours and hot restrike.

Note that lamp power is automatically reduced to 400 W after 10 seconds when the fixture is blacked out with the dimmer. This enhances lamp life. The lamp returns to 700W as soon as the dimmer is opened.

**Warning!** *Installing any other lamp may create a safety hazard or damage the fixture!*

To reduce the risk of explosion, replace the lamp when it reaches the limit of its average service life, i.e. when usage reaches 750 hours. *Never* exceed the lamp's average service life by more than 10%. To read lamp hours from the control panel, please refer to "Readouts" on page 13. Replace the lamp immediately if it is deformed or in any way defective.

For maximum service life, avoid dousing the lamp before it has warmed up for at least 5 minutes.

## Lamp replacement

**Important!** *Do not touch the quartz bulb with bare fingers. Wear safety glasses and gloves when handling lamps.*

Replacement lamps are available from your Martin dealer (P/N 97010212).

The clear quartz bulb must be clean and free of any oils from your fingers. Clean the lamp with an alcohol wipe and polish it with a dry cloth, particularly if you accidentally touch the bulb.

### To replace the lamp

1. Disconnect the fixture from power and allow it to cool for at least 45 minutes or until the lamp access plate is cool enough to touch. Lock the head right-side up.
2. Release the 4 quarter-turn fasteners marked with arrows on the lamp access plate, as shown in Figure 1. Pull the lamp assembly straight back as far as it goes and let it rest in place.
3. Push down the retention spring on the right end of the socket and push out the pin. You can use a screwdriver to gently pry the lamp out of the socket as shown in Figure 2. Remove the lamp.

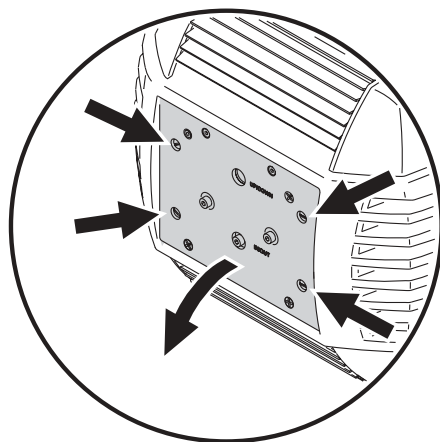


Figure 1: Lamp access

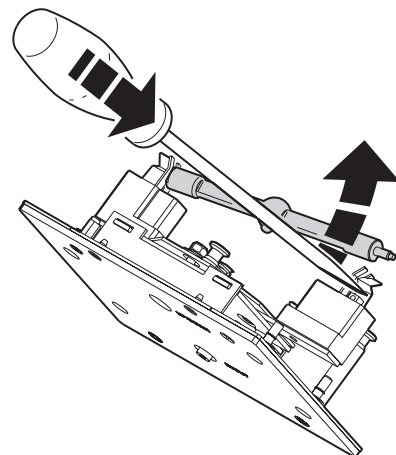


Figure 2: Lamp removal

4. With the nipple on the replacement lamp facing towards the back as shown in Figure 3, insert the left pin into the socket. Push down on the right-hand spring and snap the pin into place.

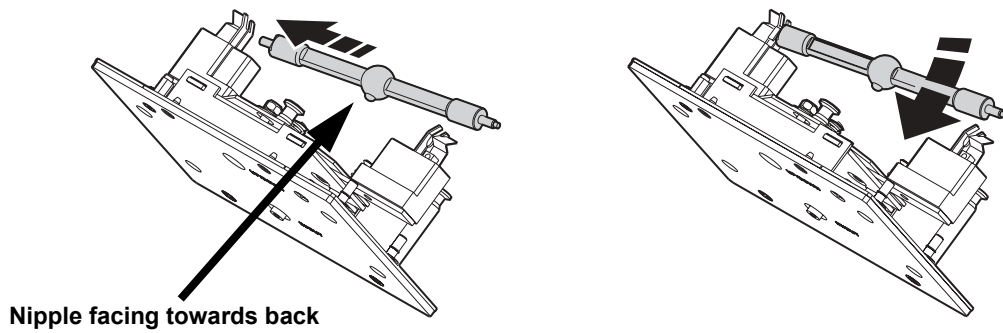


**Figure 3: Lamp insertion**

5. Make sure that the terminals on the lamp sit below the V-section in the lampholder clips and not in the V-section itself, as shown in Figure 4.

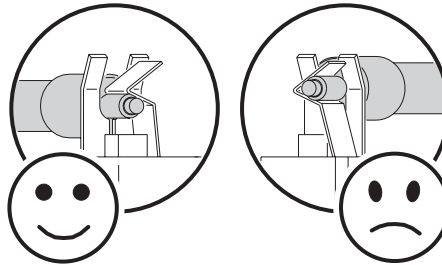


**Figure 4: Lamp terminals**

6. Lift the lamp assembly so that lamp is level with the center of the reflector. Push the assembly straight in until it seats, making sure the lamp passes through the reflector opening.
7. Push and turn the 4 fasteners a quarter turn or so clockwise to close the lamp access panel.
8. After installing a new lamp, reset the lamp hour and lamp strike counters. See "Time" on page 13.

### To align the lamp

**Important!** *Align the lamp carefully. An excessive hot-spot will damage optical components.*

1. Apply power and allow the MAC 700 Profile to reset. Using either a controller or the control menu, strike the lamp and project an open white beam on a flat surface.
2. See Figure 5. Center the hot spot vertically using the top Allen-head adjustment screw (A) in the center of the rear plate. Center the hot spot horizontally using the side-to-side adjustment screws (C).
3. If there is an excessive hot spot, turn the bottom adjustment screw (B) counterclockwise until the light is evenly distributed. If the light is brighter around the edge than it is in the center, or if light output is low, turn the bottom adjustment screw (B) clockwise until the light is bright and evenly distributed.

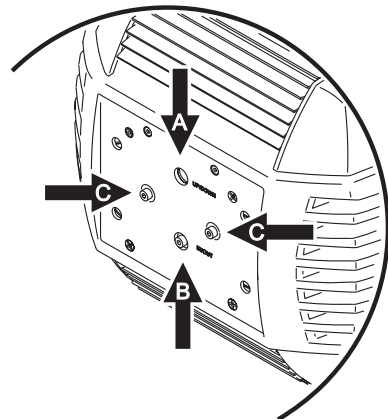


**Figure 5: Lamp adjustment screws**

# DMX data link

**Important! Never connect more than 1 data input and 1 data output.**

The MAC 700 Profile has both 3-pin and 5-pin XLR sockets for DMX input and output. The pin-out on all sockets is pin 1 to shield, pin 2 to cold (-), and pin 3 to hot (+). There is no connection to pins 4 and 5.

The sockets are wired in parallel: both inputs connect to both outputs. *To avoid damage to the fixture, never use more than one input and one output socket!*

## Tips for reliable data transmission

- Use shielded twisted-pair cable designed for RS-485 devices: standard microphone cable cannot transmit control data reliably over long runs. 24 AWG cable is suitable for runs up to 300 meters (1000 ft). Heavier gauge cable and/or an amplifier is recommended for longer runs.
- Never use both outputs to split the link. To split the serial link into branches use a splitter such as the Martin 4-Channel Opto-Isolated RS-485 Splitter/Amplifier.
- Do not overload the link. Up to 32 devices may be connected on a serial link.
- Terminate the link by installing a termination plug in the output socket of the last fixture. The termination plug, which is a male XLR plug with a 120 Ohm, 0.25 Watt resistor soldered between pins 2 and 3, “soaks up” the control signal so it does not reflect and cause interference. If a splitter is used, terminate each branch of the link.
- Some older fixtures have reversed polarity data sockets (pin 2 hot and pin 3 cold). Polarity is normally labelled on devices and described in user manuals. *Use a phase-reversing cable between the MAC 700 Profile and any device with reversed polarity.*

| 3-pin to 3-pin<br>phase-reversing<br>adaptor |        |
|----------------------------------------------|--------|
| Male                                         | Female |
| 1                                            | 1      |
| 2                                            | 3      |
| 3                                            | 2      |
| P/N 11820006                                 |        |

| Male termination plug |                                                                                               |
|-----------------------|-----------------------------------------------------------------------------------------------|
| Male XLR              |                                                                                               |
| 1                     |                                                                                               |
| 2                     |  120 Ohm |
| 3                     |                                                                                               |
| P/N 91613017          |                                                                                               |

## To connect the data link

1. Connect the DMX data output from the controller to the MAC 700 Profile's 3-pin or 5-pin input (male) socket.
2. Using the sockets that match your data cable, connect the output of the fixture closest to the controller to the input of the next fixture.
3. Insert a male 120 Ohm XLR termination plug in the 3-pin or 5-pin output of the last fixture on the link.

# Rigging

The MAC 700 Profile can be placed on stage or clamped to a truss in any orientation. The mounting points allow the clamp brackets to be fastened parallel or perpendicular to the front as shown Figure 6.

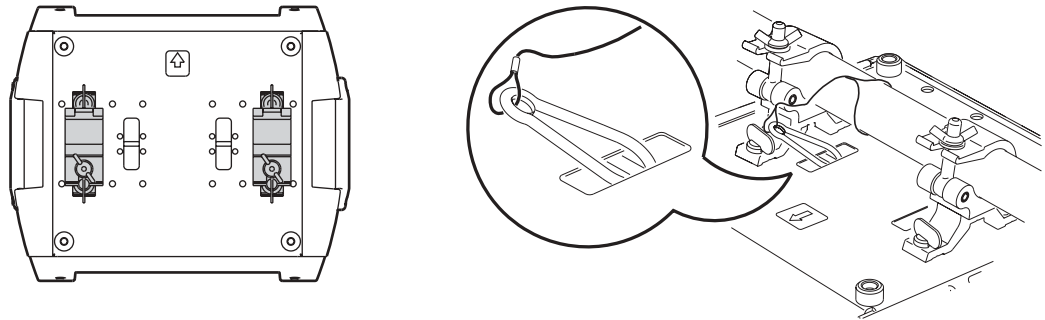


**Figure 6: Clamp bracket positions and safety wire attachment point**

**Warning!** *Always use 2 clamps to rig the fixture. Lock each clamp with both 1/4-turn fasteners. The fasteners are locked only when turned fully clockwise.*

**Warning!** *Attach an approved safety cable to the attachment point labelled “SAFETY WIRE” in the base. Never use the carrying handles for secondary attachment.*

## To clamp the fixture on a truss

1. Check that the rigging clamps are undamaged and can bear at least 10 times the weight of the fixture. Check that the structure can bear at least 10 times the weight of all installed fixtures, clamps, cables, auxiliary equipment, etc.
2. Bolt each clamp securely to a clamp bracket with an M12 bolt (minimum grade 8.8) and lock nut.
3. Align a clamp with 2 mounting points in the base. Insert the fasteners into the base and turn both levers a full 1/4-turn clockwise to lock. Install the second clamp.
4. Block access under the work area. Working from a stable platform, hang the fixture on the truss with the arrow towards the area to be illuminated. Tighten the rigging clamps.
5. Install a safety wire that can bear at least 10 times the weight of the fixture. The attachment point is designed to fit a carabiner clamp.
6. Check that the tilt lock is released. Verify that there are no combustible materials or surfaces to be illuminated within 1.2 meters (42 inches) of the fixture, and that there are no flammable materials nearby.
7. Check that there is no possibility of heads or yokes colliding with other fixtures.

# Control panel

You can set the MAC 700 Profile's DMX address, configure individual fixture settings (personality), read out data, and execute service utilities from the fixture's control panel. Settings can also be changed remotely via the DMX link with the Martin MP-2 uploader.

See also the control menu overview starting on page 35 for a complete list of the menus and commands available in the control panel.

## Menu navigation

The DMX address and any status messages (see page 41) are displayed on the control panel when the MAC 700 Profile is powered on. To enter the menu, press [Menu]. Press [Up] and [Down] to move within the menu. To select a function or submenu, press [Enter]. To escape a function or menu, press [Menu].

Note: [Enter] must be pressed and held for a few seconds to enter the Utilities menu.

## DMX address and protocol

The DMX address, also known as the start channel, is the first channel used to receive instructions from the controller. For independent control, each fixture must be assigned its own control channels. Two MAC 700 Profiles may share the same address, however, if identical behavior is desired. Address sharing can be useful for diagnostic purposes and symmetric control, particularly when combined with the inverse pan and tilt options.

Depending on the selected DMX mode, the MAC 700 Profile requires 23 or 31 DMX channels. The basic mode uses 23 channels and provides coarse control of all effects plus fine control of gobo rotation, pan, and tilt. The extended mode uses 31 channels and provides the basic mode features plus fine control of the dimmer, color wheel, CMY color mixing, iris, focus, and zoom.

DMX addressing is limited to channels 1-490 (in basic mode) and 1-482 (in extended mode). This makes it impossible to set the DMX address so high that you are left without enough control channels for the fixture.

### To set DMX address and protocol

1. Press [Menu] to enter the main menu.
2. Press [Up] until **ADDR** is displayed. Press [Enter]. To snap to channel 1, press [Enter] and [Up]. Scroll to the desired channel and press [Enter].
3. Select **PSET** from the main menu and press [Enter]. Select **16BT** for basic mode, or **16EX** for extended mode. Press [Enter].

## Tailoring performance

### MOVEMENT

The MAC 700 Profile provides several options for optimizing movement for different applications.

- The protocol setting (**PSET**) setting selects the basic (**16BT**) or extended (**16EX**) control mode. Extended mode provides finer position control of the dimmer, color wheel, CMY color mixing, iris, focus lens, and zoom lens than the basic mode.
- The pan and tilt invert (**PTI**) menu swaps and/or inverts pan and tilt.
- The pan/tilt speed (**PTSP**) menu provides 3 settings: **FAST**, **NORM**, and **SLOW**. **NORM** is best for most applications. **FAST** provides better performance in applications where speed is most important. **SLOW** provides the smoothest movement and is best in long-throw applications with slow movements through narrow angles.
- The studio mode (**STUD**) setting optimizes all effects besides pan and tilt for quietness or speed.

- The shortcuts (*PERS*→*SCUT*) setting determines whether the gobo and color wheels take the shortest path between two positions, crossing the open position if necessary, or always avoid the open position.

## DIMMER

The dimmer curve setting (*PERS*→*DI CU*) provides two options for dimmer behavior. Select *DIM 1* to simulate tungsten dimming or *DIM 2* for more linear dimming.

## DISPLAY

The display intensity (*PERS*→*DI INT*) setting controls display brightness. Select *AUTO* for automatic display or manually set the intensity to a level from *10* to *100*.

The display on/off setting (*PERS*→*DI SP*) determines whether the display remains on (*ON*), remains on for 2 minutes after the last key press (*2 MN*), or for 10 minutes after the last key press (*10 MN*).

To flip the display, press [Up] and [Down] simultaneously.

## LAMP

There are two settings that modify lamp control: Automatic Lamp On (*PERS*→*AL ON*) and DMX Lamp Off (*PERS*→*DL OF*).

When *AL ON* is *OFF*, the lamp remains off until a “lamp on” command is received. When *AL ON* is *ON*, the lamp strikes automatically after the fixture is powered on. When *AL ON* is set to *DMX*, the lamp strikes automatically when the fixture receives DMX data, and it douses 15 minutes after DMX data is lost.

When *AL ON* is set to either *ON* or *DMX*, the automatic lamp strike timing is staggered to prevent all lamps from striking at once. The delay is determined by the fixture address.

The DMX Lamp Off (*DL OF*) setting allows you to enable (*ON*) or disable (*OFF*) the DMX command that switches off the lamp. The special combination of DMX values listed on page 29 allows you to execute the lamp-off command even when disabled.

## DMX RESET

The DMX reset (*PERS*→*DI RES*) setting controls the behavior of the reset command. When set to *ON*, the command is fully enabled. When set to *OFF*, the command is disabled to prevent accidental resets. When set to *5 SEC*, the command must be sent for five seconds. The special combination of DMX values listed on page 29 allows you to execute a reset even when the command is disabled.

## CMY AND IRIS BLACKOUT

The CMY blackout (*PERS*→*CMY B*) and iris blackout (*PERS*→*IRI B*) settings enhance blackout effectiveness. When set to *ON*, the CMY flags and iris deploy 3 seconds after dimmer blackout. These absorb any light that may escape past the dimmer.

The CMY flags and iris take a fraction of a second longer to open than the dimmer blades, however, so setting CMY and iris blackout to *OFF* (the default setting) allows the fixture to snap open more rapidly after a blackout.

## CUSTOM SETTINGS

The custom configuration function allows you to save and recall three sets of fixture settings. The savable settings are DMX mode, pan/tilt speed, pan/tilt inverse and swap, DMX lamp off and reset, display settings, shortcuts, studio mode, automatic lamp on, effects feedback, tracking algorithm, and tracking samples.

# Readouts

## TIME

*INFO*→*TIME* provides readouts of fixture hours (*HRS*), lamp hours (*L HR*), and lamp strikes (*L ST*). Under each item is a resettable (*RESET*) increment counter and a non-resettable (*TOTL*) counter for total accumulated hours/strikes since fabrication. To reset an increment counter, display it and then press [Up] until it reads *0*. (This may also be done remotely using the MP-2 Uploader.)

## TEMPERATURE

*INFO*→*TEMP* provides temperature readouts for the head, lamp, PCB and power supply in Celsius and Fahrenheit.

## FIRMWARE VERSION

*INFO*→*VER* displays the version number of the installed firmware. The firmware version is also displayed briefly at startup.

## DMX

The DMX log (*DMXL*) menu provides useful information for troubleshooting control problems.

*RATE* displays the DMX refresh rate in packets per second. Values lower than 10 or higher than 44 may result in erratic performance, especially when using tracking control.

*QUAL* displays the quality of the received DMX data as a percentage of packets received. Values much below 100 indicate interference, poor connections, or other problems with the serial data link that are the most common cause of control problems.

*STCO* displays the DMX start code. Packets with a start code other than 0 may cause irregular performance.

The remaining options under *DMXL* display the DMX values received on each channel. If the fixture does not behave as expected, reading the DMX values can help you troubleshoot the problem.

## Service messages

The Service LED on the control panel lights under conditions that require fixture service, and there is a message describing the service required. To display the message, select *SMSG* in the main menu. This item is available only when the LED is lit. There are two service messages.

*REPLACE LAMP* is displayed when the lamp counter exceeds 750 hours, which is the rated average life for the lamp.

*FIXTURE OVERHEATING* is displayed when the head temperature exceeds 85° C (185° F). Overheating is probably due to dirty air filters, fans, or air vents; incorrect power supply settings, or a defective fan.

## Manual control

The manual control menu (*MAN*) provides commands for resetting the fixture (*RST*), striking the lamp (*LON*), and dousing the lamp (*LOFF*). It also permits you to position and move individual effects.

## Service utilities

**Important!** *[Enter]* must be held for several seconds to access the utilities menu.

### TEST SEQUENCES

*TSEQ* provides a general test of all effects that can be run without a controller. *UTIL*→*PCBT* provides routines for circuit board testing that are for service use only.

### FEEDBACK TOGGLES

An on-the-fly position correction system monitors the gobo and color wheels, rotating gobos, and the animation wheel. If a position error is detected, the shutter closes while the effect resets. This feature can be disabled by turning effects feedback (*UTIL*→*EFFB*) off.

The automatic pan/tilt position correction system may be temporarily turned off under *UTIL*→*FEBA*. The off setting, however, is not saved and the system will be re-enabled the next time the fixture starts. If the system cannot correct the pan/tilt position within 10 seconds, feedback is automatically disabled.

## ADJUSTMENT

The adjustment menu (*UTIL*→*ADJ*) provides manual control for making mechanical adjustments. See page 39.

## CALIBRATION

The calibration menu (*UTIL*→*CAL*) provides utilities to define offsets in software that are relative to the mechanical reset or home positions. This allows you to fine tune optical alignment and achieve uniform performance between fixtures. Dimmer and zoom are calibrated to defined points. The other effects are calibrated relative to an arbitrary reference fixture.

All offsets can be set to *128* (the middle of their adjustment range) with the default offset command: select *UTIL*→*CAL*→*DOF*→*SURE* then press [Enter].

### To calibrate effects

1. Apply power but do not strike the lamp until zoom has been calibrated.
2. To calibrate zoom, first remove the bottom head cover. Select *UTIL*→*CAL*→*ZDOF* and press [Enter]. Adjust the offset until the face of the zoom lens plate is flush with the back edge of the focus plate. Press [Enter] to save the setting. Replace the bottom head cover.
3. Pan calibration is most useful when multiple fixtures are stacked vertically. To calibrate, set zoom, focus, iris, and tilt position for easy one-over-the-other comparison and set each fixture to the same pan DMX value. Select one fixture to be the reference fixture. On the other fixtures, select *UTIL*→*CAL*→*P DOF* and press [Enter]. Adjust the offset as necessary to align the beam with the reference beam. Press [Enter] to save the setting.
4. Tilt calibration is most useful when multiple fixtures are arranged horizontally. To calibrate, set zoom, focus, iris, and pan position for easy side-by-side comparison and set each fixture to the same tilt DMX value. Select one fixture to be the reference fixture. On the other fixtures, select *UTIL*→*CAL*→*T DOF* and press [Enter]. Adjust the offset as necessary to align the beam with the reference beam. Press [Enter] to save the setting.
5. To calibrate the dimmer, set the iris to fully closed and set focus to 1m in the *UTIL*→*ADJ* menu. Select *UTIL*→*CAL*→*I DOF* and press [Enter]. Hold a piece of paper over the lens. Set the offset to zero and then increase it until a clearly defined M shape with minimal light spill is projected onto the paper. Press [Enter] to save the setting and remove the paper.
6. To calibrate color mixing flags (cyan, magenta and yellow), project white beams with no dimming and position them for easy comparison. On each fixture, *including the reference*, select *UTIL*→*CAL*→*C DOF* and press [Enter]. This adds a defined amount of cyan. Select one fixture to be the reference. Adjust the offsets on the other fixtures to match the reference color. Press [Enter] to save the setting. Repeat for *M DOF* (magenta) and *Y DOF* (yellow).
7. Focus calibration is useful when two or more fixtures are the same distance from a projection surface. To calibrate focus, set up all fixtures with the same focus, zoom, dimming, iris, and gobo values. Select a focused fixture to be the reference. On the other fixtures, select *UTIL*→*CAL*→*FDOF* and press [Enter]. Adjust the offset to focus the image. Press [Enter] to save the setting.

## FANS

The cooling fans can be set to either full speed or thermostatically regulated operation via *UTIL*→*FANS*. In lower ambient temperature environments, regulated operation is recommended if reduced noise levels are desired. Service life of lamps, fans, etc. is maximized if fans are set to full speed.

## SOFTWARE UPLOAD

The upload mode command (*UTIL*→*UPL* *I*) prepares the fixture for a software update. This command is not normally necessary, as upload mode is engaged automatically by the uploader.

# Effects

This section describes the functions programmed in the MAC 700 Profile DMX protocols.

The MAC 700 Profile has two DMX operating modes, 16-bit basic and 16-bit extended. The extended mode requires eight more DMX channels than the basic mode and provides all features of the basic mode plus fine control of the dimmer, cyan, magenta, yellow, color wheel, iris, zoom, and focus.

Where fine control is available, the main control channel sets the first 8 bits (the most significant byte or MSB), and the fine channels set the second 8 bits (the least significant byte or LSB) of the 16-bit control byte. In other words, the fine channel works within the position set by the coarse channel.

See page 29 for the complete DMX protocol.

## Lamp power

### LAMP-ON

The lamp-on command on channel 1 strikes the lamp if it is off. If the lamp is on, this command has no effect.

Note: A peak of electric current that can be many times the operating current is drawn for an instant when striking a discharge lamp. Striking many lamps at once may cause a voltage drop large enough to prevent lamps from striking or draw enough current to trip circuit breakers. If sending lamp-on commands to multiple fixtures, program a sequence that strikes lamps one at a time at 5 second intervals.

### LAMP-OFF

The lamp can be doused from the controller with the lamp-off command on channel 1. The command must be sent for 5 seconds.

If the lamp-off command is disabled in the control menu (*PERS*→*ILDF*→*OFF*), the lamp-off command can still be selected on channel 1 if the following effects are also selected:

- color wheel: slot 1 – DMX 189 - 193 on channel 6 (basic mode) or 10 (extended)
- prism: on, no rotation – DMX 80 - 89 on channel 14 (basic) or 19 (extended)
- gobo wheel 1 (rotating gobos): open – DMX 0 - 11 on channel 7 (basic) or 12 (extended)
- gobo wheel 2 (static gobos): open – DMX 0 or 194 - 202 on channel 10 (basic) or 15 (extended)

### 400 W AND 700 W LAMP POWER MODES

If full light output is not required, the lamp can be switched to 400 W mode by sending a DMX value from 238 to 242 on channel 1. Running in 400 W mode will significantly increase lamp life.

If the shutter is closed for longer than 10 seconds while the lamp is in 700 W mode, lamp power is automatically switched to 400 W. When the shutter is opened again, the lamp returns to 700 W mode.

## Fixture reset

If an effect loses its indexing and fails to move to programmed positions, the fixture can be reset from the controller by sending the “Reset” command on channel 1.

If DMX reset is disabled in the control menu (*PERS*→*IRFS*→*OFF*), the reset command can only be executed if the conditions listed under “Lamp-off” are met. If it is set to *5SEC*, the reset command must be sent for 5 seconds before it is executed.

## Dimming and strobe

The mechanical dimmer/shutter system provides smooth, high-resolution 100 percent dimming, instant open and blackout, random and variable strobe effects up to 10 Hz, and random and variable pulses in which the dimmer snaps open and slowly dims or snaps closed and slowly opens.

Fine control of the dimmer is available on channel 3 in extended mode.

## Cyan, Magenta and Yellow

Cyan, magenta and yellow can be added on channels 3, 4 and 5 (4, 6 and 8 in extended mode). Fine control is available on channels 5, 7 and 9 in extended mode.

## Color wheel

The color wheel has 8 color filters that can scroll continuously, allowing split colors, or in full-color steps. The DMX protocol provides commands for random and continuous color scrolling at different speeds.

Fine control of the color wheel is available on channel 11 in extended mode.

## Rotating gobos

The rotating gobo wheel (gobo wheel 1) has six gobos that can be selected, indexed (positioned at a programmed angle), rotated continuously, and shaken (bounced). The gobo wheel can also be scrolled continuously. These features are controlled on channel 7 (12 in extended mode). Index angle or rotation speed is set on channel 8 (13 in extended mode), with fine control available on channel 9 (14 in extended mode).

## Static gobos

The static gobo wheel (gobo wheel 2) has nine static gobos and can be scrolled continuously (allowing split gobo effects) or in full-gobo steps using channel 10 (15 in extended mode). Random gobo scrolling and continuous gobo wheel rotation can also be set at different speeds.

## Gobo/color macros

Channel 11 (16 in extended mode) provides pre-programmed variable-speed macros that use different combinations of color and gobos.

## Gobo animation

The gobo animation system is designed to create animated effects such as rising flames or windswept clouds when combined with other gobos.

Channel 12 (17 in extended mode) sets the animation wheel's rotation mode (indexed or continuous), and start position.

Channel 13 (18 in extended mode) sets the wheel's:

- index angle if indexed rotation is selected on channel 12 (17 in extended mode)
- rotation speed and direction if continuous rotation is selected on channel 12 (17 in extended mode).

## Prism and iris

On channel 14 (19 in extended mode), the prism can be added and rotated clockwise and counterclockwise at varying speeds.

Channel 15 (20 in extended mode) controls the diameter of the iris opening and provides variable speed pulsing effects. Fine control of the iris is provided on channel 21 in extended mode.

## Focus and zoom

The focus lens focusses the beam from approximately 2 meters (6.5 feet) to infinity. The separate zoom lens varies the focused beam angle from 14° to 30°. Fine control of focus is available on channel 23 in extended mode. Fine control of zoom is available on channel 25 in extended mode.

## Diffuser

A diffuser glass is fitted to give an even light beam at very low light levels. The diffuser can be removed to give approximately 10% higher light output (see “Diffuser” on page 23) for details of removal/installation.

## Pan and tilt

Pan and tilt are controlled on channels 18 to 22 (26 to 30 in extended mode). Coarse and fine control are available in both basic and extended modes.

## Pan/tilt speed and effects speed channels

### TRACKING VERSUS VECTOR CONTROL

**Important!** *Effect movement may be rough and unpredictable if controller fade times are combined with vector speed values.*

The speed channels provide two methods for controlling speed that are known as “tracking” and “vector”.

With tracking control, the speed at which effects move is determined by a cross-fade time programmed on the controller. With this method, the controller divides a movement into tiny steps that the fixture “tracks”. Tracking control is enabled via the speed channel for the effect concerned.

With vector control, speed is set with a DMX value on the speed channel. This provides a way to control speed on controllers without cross-faders. Vector control can also provide smoother movement, particularly at slow speeds, with controllers that send slow or irregular tracking updates. When using vector control, the controller’s cross-fade time, if available, must be set to 0.

### BLACKOUT

When “blackout while moving” is selected on a speed channel, the shutter closes when an effect moves to make the transition invisible. The shutter opens when the movement is complete. This function is available for pan and tilt on channel 30 (22 in basic mode) and for color, gobo selection, gobo movement and prism change on channel 31 (23 in basic mode).

### PERSONALITY OVERRIDES

The pan/tilt speed channel provides tracking values that allow you to override the pan/tilt speed setting from the controller.

The effects speed channel provides values for overriding the shortcuts setting for the color and gobo wheels.

# Optical configuration

## Color wheel

The MAC 700 Profile features a color wheel with 8 interchangeable dichroic color filters and an open position. The illustration shows the filter positions as seen from the lens. Refer to the DMX protocol for filter colors.

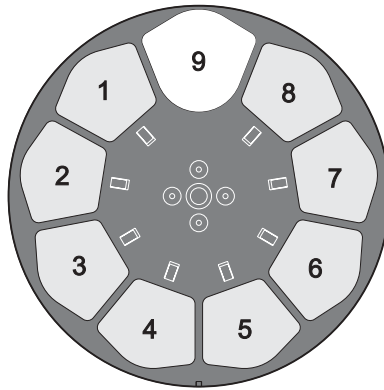


Figure 7: Filter positions, seen from lamp

## To replace a color filter

Note: Wear cotton gloves while handling color filters and use only genuine Martin filters.

1. Disconnect the fixture from AC power and allow it to cool.
2. Lock the head in the upside-down position (the indication TOP on the back of the head must be upside down) and remove the bottom cover.
3. For best access, align the rotating gobo wheel so that the open position is above the color filter to be replaced (see arrow in Figure 8).
4. Turn the color wheel to access the desired filter position. Press the filter forwards slightly to release it and then grasp it by the edges and remove. If your fingers are too large, protect the glass with a piece of paper that has been folded several times and grasp the filter with needle nose pliers.
5. To insert a filter, slide it under the retention spring until it snaps into place.
6. Replace the cover and unlock the head before applying power.

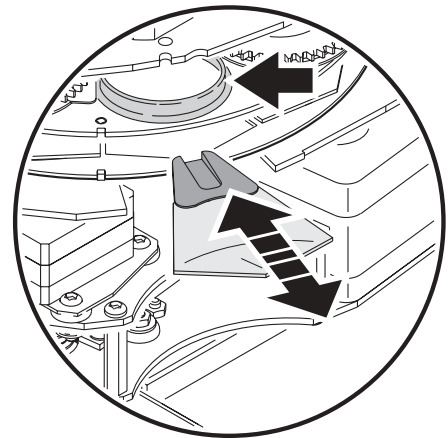


Figure 8: Filter replacement

## Gobos

Gobo wheel 1 provides 6 rotating gobos; gobo wheel 2 provides 9 static gobos. The standard gobo configuration is shown in Figure 9. Five extra metal gobos are supplied with the fixture. All gobos are interchangeable with the following limitations:

- On wheel 1, the gobo retention spring works with gobos up to 3 mm in thickness. Thicker gobos can be glued to the holder with a UV adhesive or Loctite 330 Multibond with Activator.
- Gobo 3 on wheel 1 is glass, and must therefore be changed together with its holder. A spare gobo retention spring for use with a metal gobo is supplied with the product.
- The maximum thickness for gobos on wheel 2 is 1.1 mm (0.043 inches).

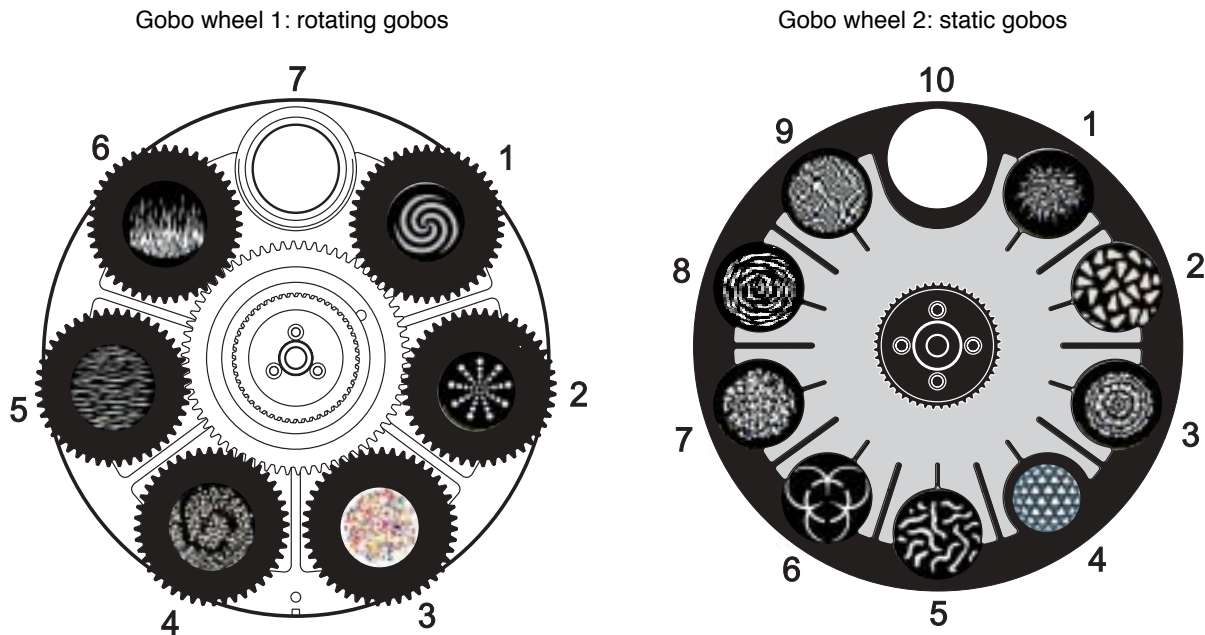


Figure 9: Gobo wheels as seen from front lens

### CUSTOM GOBOS

Martin can provide many additional gobos for the MAC 700 Profile. Gobos are interchangeable between MAC 500, MAC 550 and MAC 700 fixtures. For more information, please visit the Martin web site at [www.martin.com](http://www.martin.com).

For optimum performance and gobo life, custom glass gobos should be made with the artwork reversed on the coated side and used with the coated side facing away from the lamp.

While glass gobos are generally the most durable, satisfactory results can be obtained at less expense with aluminum gobos. Custom stainless steel gobos can also be used, however they can warp, losing sharpness, in a matter of hours. The useful life will depend on the gobo pattern and the projection cycle. Consult your gobo supplier for more information.

For best results, custom gobos should meet the specifications listed on page 46.


## GOBO ORIENTATION IN THE MAC 700 PROFILE

The orientations shown in Figure 10 are correct in most cases, but consult your Martin dealer or gobo supplier if you are in any doubt about the orientation of a specific gobo type.

### Coated Glass Gobos


Focus is easiest to maintain if all coated gobos in a fixture are installed with their coatings as close as possible to the same plane of focus. The coated gobos in the MAC 700 Profile are factory-installed in this position. However, if there is an unusually high risk of heat damage on a custom coated gobo, the first priority is normally to ensure that more reflective sides face towards the lamp. If in doubt, install coated gobos with the more reflective side towards the lamp, or consult your Martin dealer or gobo supplier.

#### More reflective side towards lamp

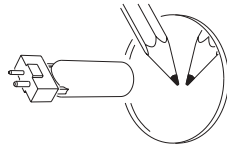


To minimize the risk of gobo overheating and damage, turn the more reflective side of a coated gobo towards the lamp.

#### Less reflective side away from lamp

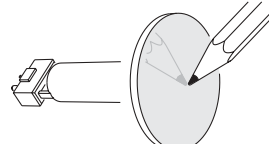


The less reflective side of a coated gobo will absorb less heat if it faces away from the lamp.

*To determine which side of a gobo is coated, hold an object up to it. On the uncoated side, there is a space between the object and its reflection and the edge of the gobo can be seen when looking through the glass.*

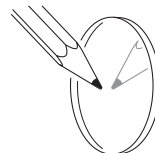


Uncoated side

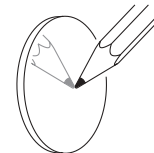


Coated side

### Textured Glass Gobos

#### Textured side towards lamp

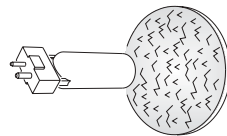


#### Smooth side away from lamp

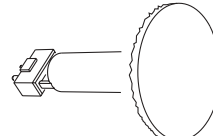


Textured glass gobos in the MAC 700 Profile sit most squarely in the gobo wheel with the textured side towards the lamp. If in doubt, consult your Martin dealer or gobo supplier.

### Metal Gobos

#### Reflective side towards lamp

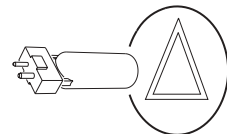


#### Black side away from lamp

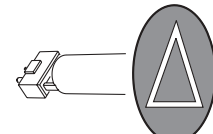

### Image / text Gobos

#### True image towards lamp

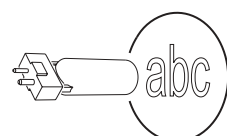

#### Reversed image away from lamp

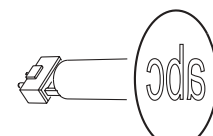


Figure 10. Correct gobo orientation

## To replace rotating gobos

**Important!** *The gobo can fall out if the spring is inserted backwards.*

1. Disconnect the fixture from power and allow it to cool.
2. Position the head upside down and remove the bottom head cover. Turn the gobo wheel to the desired position. Grasp the holder by the teeth and pull the holder lightly towards the front lens to release the holder and remove it from the wheel.
3. With a small screwdriver or similar, unhook the end of the gobo spring furthest from the gobo and pull out the spring. Drop the gobo out of the holder.
4. Insert the new gobo in the holder with the side that faces towards the lamp facing upwards, towards the spring (see Figure 10 and Figure 11).
5. Insert the spring with the narrow end against the gobo, as shown in Figure 11. To identify the narrow end, press the spring flat: the narrow end is on the inside. Push the end of the spring in under the lip of the holder.
6. Verify that the gobo is seated flush against the holder. Press the spring as flat as possible against the back of the gobo.
7. Work the rim of the gobo holder under both clips and snap the gobo holder back into position on the gobo wheel. If necessary, a small screwdriver or similar tool may be used to pry the clips away from the wheel.
8. Replace the bottom cover and release the tilt lock before applying power.

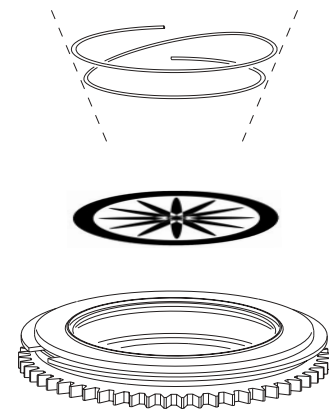



**Figure 11: Rotating gobo holder**

## To replace static gobos

1. Disconnect the fixture from power and allow it to cool.
2. Remove the top head cover.
3. Turn the gobo wheel to the desired position. Press the gobo from the lamp side to release. Remove the gobo.
4. To insert a gobo, orient the gobo as shown in Figure 10 and place the edges under the retention spring. Verify that the gobo is centered in the opening.
5. Replace the top head cover and release the tilt lock before applying power.

## Animation wheel

The MAC 700 Profile comes with the “Radial breakup” gobo animation wheel installed. Five additional stock patterns are available as accessories from Martin dealers.

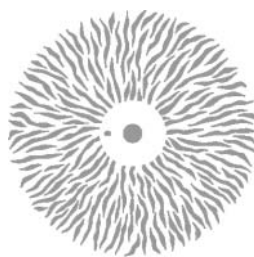

Radial breakup (included)  
P/N 62325048




Spiral breakup (optional)  
P/N 62325049



Linear breakup (optional)  
P/N 62325050



Coarse tangential (optional)  
P/N 62325051

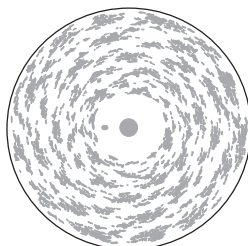

Cloud breakup (optional)  
P/N 62325094



Elliptical breakup (optional)  
P/N 62325095

**Figure 12: MAC 700 Profile animation wheels**

## To replace the gobo animation wheel

Note: The replacement animation wheel can be inserted with the magnet in or out to suit your application. In fixed applications, install the wheel with the magnet forwards, away from the drive mechanism, for easier removal. In touring or similar applications where the fixture is frequently moved, install the animation wheel with the magnet in towards the drive mechanism for a more secure hold.

1. Disconnect the fixture from power and allow it to cool.
2. Remove the gobo module as described on page 24.
3. Stand the module on the work surface with the cooling fans to your left and the color wheel to your right.
4. Bring the animation wheel to the side of the module closest to you by turning the black belt on the right.
5. To avoid bending the animation wheel while removing, break the magnet's initial hold by prying the wheel off with a screwdriver inserted from the back. Once you have broken the hold, you can safely grasp the wheel by the edge and remove.
6. Orient the replacement wheel with the magnet in or out to suit your application (see note above this list). Place the wheel over the drive mechanism and align the hole in the wheel with the drive pin.
7. Reinstall the gobo module. Verify that the guide pins are correctly seated and that the module is securely locked.
8. Replace the head cover and release the tilt lock before applying power.

## Diffuser

The MAC 700 Profile is supplied with a diffuser installed. This has the advantage of eliminating any pattern in the light beam that might be caused by the dimmer or CMY flags at very low output levels. However, the diffuser reduces total light output by approximately 10%. If slight patterning at very low output levels is not important, you may prefer to boost the maximum light output level by removing the diffuser.

### To remove the diffuser

1. Disconnect the fixture from power and allow it to cool.
2. Remove the CMY module as described on page 26.

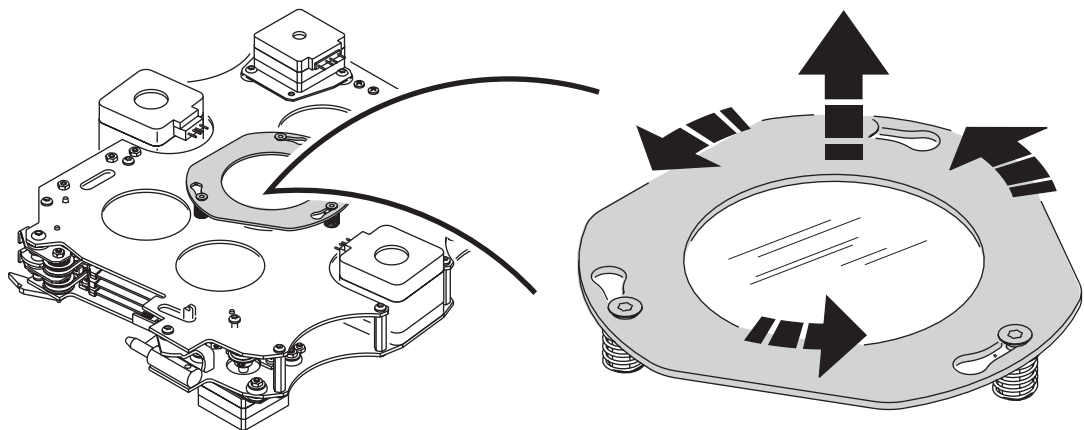


**Figure 13: Removing the diffuser**

3. The diffuser is held in a bayonet mount on the lens side of the CMY module. Push the diffuser's metal outer ring down slightly and turn counter-clockwise to release the diffuser from the three mounting points. Retain the diffuser for possible re-use.
4. Replace the CMY module and then replace the bottom cover. Release the head lock before applying power.
5. Reinstalling the diffuser is the reverse of the above procedure. Avoid contaminating the glass with grease from your fingers. If necessary, remove any traces of grease with 99% isopropyl alcohol and distilled water.

# Routine maintenance

The MAC 700 Profile requires routine cleaning. The schedule depends heavily on the operating environment. It is essential to follow the cleaning guidelines given later in this section.

Refer any service operation that is not described here to a qualified Martin technician.

**Important!** *Excessive dust, smoke fluid, and particulate buildup degrades performance, causes overheating and will damage the fixture. Damage caused by inadequate maintenance is not covered by the warranty.*

**Warning!** *Disconnect the fixture from power and allow to cool for 45 minutes before removing any cover.*

## Tilt lock

**Important!** *Release the tilt lock before operating the fixture.*

The tilt position of the head can be locked for transportation and service with the tilt lock. To lock or unlock the head, pull the lock out and turn it one-quarter turn in either direction.

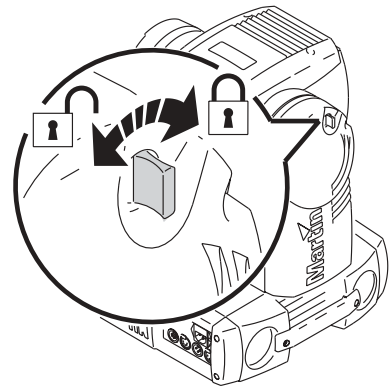


Figure 14: Tilt lock

## Disassembly

### To remove the gobo module

1. Disconnect the fixture from power and allow it to cool for 45 minutes.
2. Turn the four retaining screws in the top and bottom head covers one quarter-turn counter-clockwise to release the covers.
3. Remove the front lens by twisting one quarter-turn counter-clockwise.

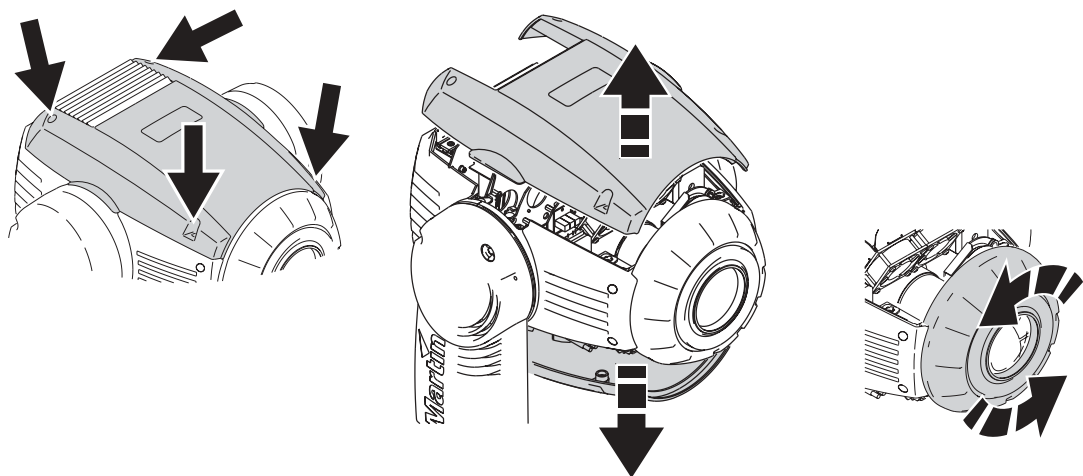


Figure 15: Releasing top and bottom covers and removing front lens

4. Position the head top side up so that you have access through the top. Holding the zoom lens by its base, slide it out to its limit at the front of the fixture as shown in Figure 16.

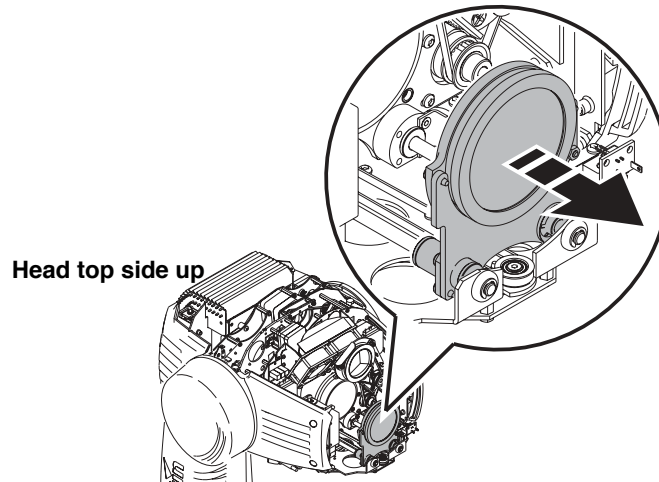


**Figure 16: Moving the zoom lens forward**

5. Flip the head upside-down. Move the focus lens to its forward limit by pulling on its belt as shown in Figure 17.

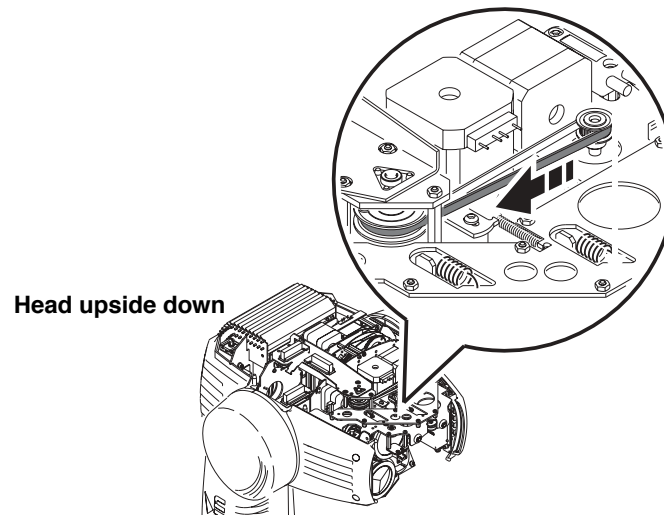


**Figure 17: Moving the focus lens forward**

6. Flip the head top side up again. To avoid bending the gobo animation wheel when you remove the module, move the wheel in towards the center of the module by inserting a finger and rotating the positioning belt idler pulley at the top of the module as shown in Figure 18.

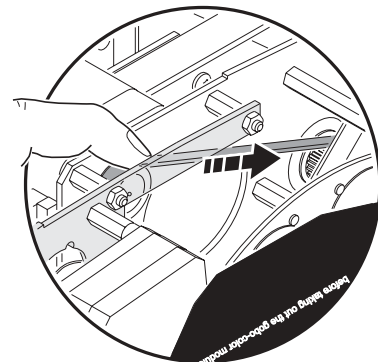


**Figure 18: Retracting the gobo animation wheel**

7. Unlock the gobo module by pulling the levers on each side towards the center. Lift the module up 1 cm (0.5 in.) and release the levers. Lift the module straight up to remove from the head.

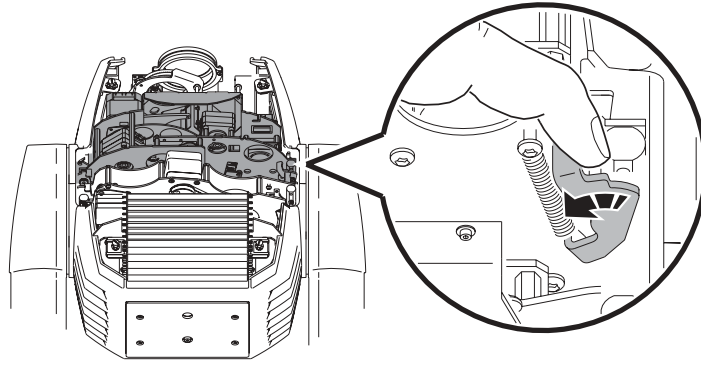


**Figure 19: Gobo module locking levers**

8. When reinstalling the module, verify that the guide pins are correctly seated and that the module is securely locked.

### To remove the CMY module

The CMY module can be removed for service and access to the lamp cooling fans and heat shield:

1. Like the gobo module, the CMY module is also released by pulling on two levers. Lift the module straight up to remove from the head.
2. When reinstalling, verify that the guide pins are correctly seated and that the module is securely locked.

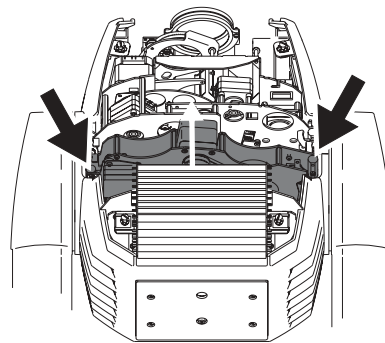


**Figure 20: CMY module locking levers**

## Cleaning

Regular cleaning is very important for fixture life and performance. Buildup of dust, dirt, smoke particles, fog fluid residues, etc. degrades the fixture's light output and cooling ability.

Cleaning schedules for lighting fixtures vary greatly depending on the operating environment. It is therefore impossible to specify precise cleaning intervals for the MAC 700 Profile. Cooling fans suck in airborne dust and smoke particles, and in extreme cases fixtures may require cleaning after surprisingly few hours of operation. Environmental factors that may result in a need for frequent cleaning include:

- Use of smoke or fog machines.
- High airflow rates (near air conditioning vents, for example).
- Presence of cigarette smoke.
- Airborne dust (from stage effects, building structures and fittings or the natural environment at outdoor events, for example).

If one or more of these factors is present, inspect fixtures within their first 25 hours of operation to see whether cleaning is necessary. Check again at frequent intervals. This procedure will allow you to assess cleaning requirements in your particular situation. If in doubt, consult your Martin dealer about a suitable maintenance schedule.

Use care when cleaning optical components and work in a clean, well lit area. The coated surfaces are fragile and easily scratched. Do not use solvents that can damage plastic or painted surfaces.

### To clean the fixture

1. Disconnect the fixture from power and allow the components to cool completely.
2. Remove the covers, front lens and gobo and CMY modules as described earlier.
3. Vacuum or gently blow away dust and loose particles with compressed air.
4. Carefully clean the optical components. Remove smoke and other residues with cotton swabs or unscented tissues moistened with isopropyl alcohol. A commercial glass cleaner may be used, but

residues must be removed with distilled water. Clean with a slow circular motion from center to edge. Dry with a clean, soft and lint-free cloth or compressed air. Remove stuck particles with an unscented tissue or cotton swab moistened with glass cleaner or distilled water. Do not rub the surface: lift the particles off with a soft repeated press.

5. Remove dust from the head fans and air vents with a soft brush, cotton swab, vacuum, or compressed air.
6. On each side of the head, remove the 2 screws that hold the side covers. Slide the covers forward to remove. Clean the air filters or replace them. If they are saturated with smoke fluid, etcetera, soak them in warm soapy water and blot dry. Position the filters on the side covers and reinstall. See Figure 21.
7. Reassemble the head.
8. Remove the screws from the side cover/grill on the front of the base (front is indicated by an arrow on the bottom). Remove the top cover from the front of the base. Lift the power supply / ballast module up and out to expose the base fans for inspection and cleaning.
9. Reinstall the power supply / ballast module and base cover.

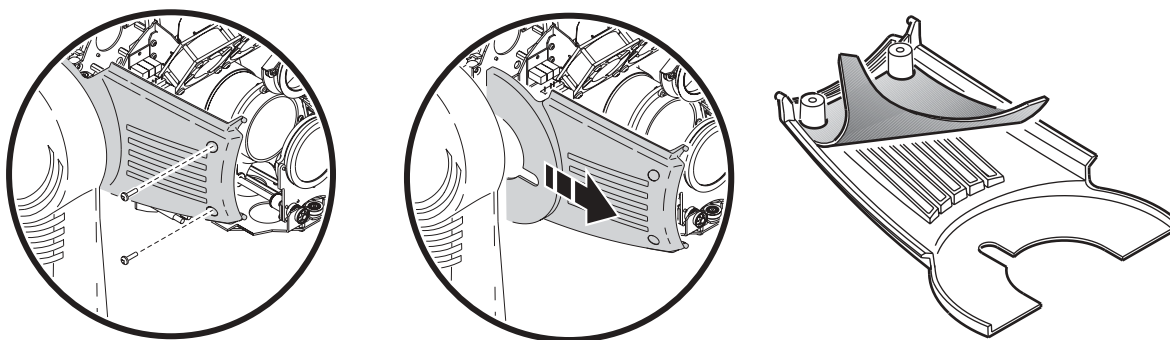


**Figure 21: Air filter replacement**

## Lubrication

The MAC 700 Profile does not require lubrication under normal circumstances. The slides for the zoom and focus lens cars are lubricated with a long-lasting teflon-based grease that can be reapplied by a Martin service partner if necessary.

## Software installation

Software updates are available from the Martin web site and can be installed via the data link with a Martin upload device.

The following are required in order to install software.

- The MAC 700 Profile update file, available for download from the User Support Area of the Martin web site (<http://www.martin.com>).
- The Martin Software Uploader program, version 5.0 or later, available for download from the User Support Area of the Martin web site.
- A Martin MP-2 Uploader connected to a Windows 95/98/ME/2000/XP PC, or one of the PC controller DMX interfaces supported by the Martin Software Uploader software.

### To install software, normal method

Please refer to the MP-2 user manual and the Martin Software Uploader online help file.

### To install software if all else fails (boot sector update)

Note: Use this procedure only if the firmware is totally corrupted, which is evident if the control panel does not respond when power is applied, or if the software update notes call for a boot sector update. In the event of a check sum error, repeat the normal upload procedure.

1. Disconnect the fixture from power.

2. Remove the side cover from the side of the base that has the control panel to expose the main PCB.
3. Locate the "BOOT" jumper on the main PCB (see page 43) and move the jumper cap to the "INIT" position.
4. Perform a boot mode upload as described in the uploader documentation.
5. When the upload is complete, disconnect the fixture from power and move the jumper back to the "DISABLE" position.
6. Reassemble the base.

# MAC 700 Profile DMX protocol

| 16-bit Basic Mode | 16-bit Extended Mode | DMX Value           | Percent | Function                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|-------------------|----------------------|---------------------|---------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1                 | 1                    | 0 - 19              | 0 - 7   | <b>Shutter, strobe, reset, lamp on/off</b><br>Shutter closed (lamp switches to 400 W mode after 10 seconds while shutter is closed)                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|                   |                      | 20 - 49             | 8 - 19  | Shutter open                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|                   |                      | 50 - 72             | 20 - 28 | Strobe, fast → slow                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|                   |                      | 73 - 79             | 29 - 30 | Shutter open                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|                   |                      | 80 - 99             | 31 - 39 | Opening pulse, fast → slow                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|                   |                      | 100 - 119           | 40 - 47 | Closing pulse, fast → slow                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|                   |                      | 120 - 127           | 48 - 50 | Shutter open                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|                   |                      | 128 - 147           | 51 - 57 | Random strobe, fast                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|                   |                      | 148 - 167           | 58 - 65 | Random strobe, medium                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|                   |                      | 168 - 187           | 66 - 73 | Random strobe, slow                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|                   |                      | 188 - 190           | 74      | Shutter open                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|                   |                      | 191 - 193           | 75      | Random opening pulse, fast                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|                   |                      | 194 - 196           | 76      | Random opening pulse, slow                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|                   |                      | 197 - 199           | 77      | Random closing pulse, fast                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|                   |                      | 200 - 202           | 78 - 79 | Random closing pulse, slow                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|                   |                      | 203 - 207           | 80 - 81 | Shutter open                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|                   |                      | 208 - 217           | 82 - 85 | Reset fixture* **                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|                   |                      | 218 - 227           | 86 - 89 | Shutter open                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|                   |                      | 228 - 237           | 90 - 93 | Lamp on                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|                   |                      | 238 - 242           | 94 - 95 | 400 W mode (active until 700 W value is selected)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| 243 - 247         | 96 - 97              | 700 W mode          |         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| 248 - 255         | 98 - 100             | Lamp off*           |         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|                   |                      |                     |         | <i>*If disabled in the control menu, Reset fixture and Lamp off work only if the following effects are selected:</i><br><br>• Color wheel to slot 1 – DMX value 17 on channel 6 (in basic mode) or 10 (extended mode)<br><br>• Prism on, no rotation – DMX value 80-89 on channel 14 (basic) or 19 (extended)<br><br>• Gobo wheel 1 open – DMX value 0 on channel 7 (basic) or 12 (extended)<br><br>• Gobo wheel 2 open – DMX value 0 on channel 10 (basic) or 15 (extended)<br><br><br><i>** A five-second delay for the Reset fixture command can be set in the control menu under DRES.</i> |
| 2                 | 2                    | 0 - 255             | 0 - 100 | <b>Dimmer (MSB)</b><br>Closed → open                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| -                 | 3                    | 0 - 255             | 0 - 100 | <b>Dimmer, fine (LSB)</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| 3                 | 4                    | 0 - 255             | 0 - 100 | <b>Cyan (MSB)</b><br>White → full cyan                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|                   |                      |                     |         | <b>Cyan range in random CMY color</b> when set on channel 11 (basic) or 16 (extended)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|                   |                      | 0                   | 0       | Normal (full range)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|                   |                      | 1 - 127             | 1 - 50  | Minimum cyan setting (127 = full cyan)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|                   |                      | 128 - 254           | 51 - 99 | Maximum cyan setting (128 = no cyan)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| 255               | 100                  | Normal (full range) |         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| -                 | 5                    | 0 - 255             | 0 - 100 | <b>Cyan, fine (LSB)</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| 4                 | 6                    | 0 - 255             | 0 - 100 | <b>Magenta (MSB)</b><br>White → full magenta                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|                   |                      |                     |         | <b>Magenta range in random CMY color</b> when set on channel 11 (basic) or 16 (extended)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|                   |                      | 0                   | 0       | Normal (full range)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|                   |                      | 1 - 127             | 1 - 50  | Minimum magenta setting (127 = full magenta)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|                   |                      | 128 - 254           | 51 - 99 | Maximum magenta setting (128 = no magenta)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| 255               | 100                  | Normal (full range) |         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| -                 | 7                    | 0 - 255             | 0 - 100 | <b>Magenta, fine (LSB)</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| 5                 | 8                    | 0 - 255             | 0 - 100 | <b>Yellow (MSB)</b><br>White → full yellow                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|                   |                      |                     |         | <b>Yellow range in random CMY color</b> when set on channel 11 (basic) or 16 (extended)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|                   |                      | 0                   | 0       | Normal (full range)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|                   |                      | 1 - 127             | 1 - 50  | Minimum yellow setting (127 = full yellow)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|                   |                      | 128 - 254           | 51 - 99 | Maximum yellow setting (128 = no yellow)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| 255               | 100                  | Normal (full range) |         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| -                 | 9                    | 0 - 255             | 0 - 100 | <b>Yellow, fine (LSB)</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |

| 16-bit<br>Basic<br>Mode | 16-bit<br>Extended<br>Mode | DMX Value | Percent  | Function                       |
|-------------------------|----------------------------|-----------|----------|--------------------------------|
| 6                       | 10                         |           |          | <b>Color wheel (MSB)</b>       |
|                         |                            |           |          | <i>Continuous scroll</i>       |
|                         |                            | 0         | 0        | Open                           |
|                         |                            | 1 - 16    | 1 - 6    | Open → slot 1                  |
|                         |                            | 17        | 7        | Slot 1 (Blue 110)              |
|                         |                            | 18 - 33   | 8 - 12   | Slot 1 → slot 2                |
|                         |                            | 34        | 13       | Slot 2 (Green 206 IAD)         |
|                         |                            | 35 - 50   | 14 - 19  | Slot 2 → slot 3                |
|                         |                            | 51        | 20       | Slot 3 (Pink 312)              |
|                         |                            | 52 - 67   | 21 - 26  | Slot 3 → slot 4                |
|                         |                            | 68        | 27       | Slot 4 (Orange 306M)           |
|                         |                            | 69 - 84   | 28 - 32  | Slot 4 → slot 5                |
|                         |                            | 85        | 33       | Slot 5 (Half minus green)      |
|                         |                            | 86 - 101  | 34 - 39  | Slot 5 → slot 6                |
|                         |                            | 102       | 40       | Slot 6 (CTC 3200 - 4100K)      |
|                         |                            | 103 - 118 | 41 - 46  | Slot 6 → slot 7                |
|                         |                            | 119       | 47       | Slot 7 (CTC 5500 - 2800K)      |
|                         |                            | 120 - 135 | 48 - 52  | Slot 7 → slot 8                |
|                         |                            | 136       | 53       | Slot 8 (Red 308)               |
|                         |                            | 137 - 152 | 54 - 59  | Slot 8 → open                  |
|                         |                            | 153       | 60       | Open                           |
|                         |                            |           |          | <i>Stepped scroll</i>          |
|                         |                            | 154 - 158 | 61 - 62  | Slot 8 (Red 308)               |
|                         |                            | 159 - 163 | 63 - 64  | Slot 7 (CTC 5500 - 2800K)      |
|                         |                            | 164 - 168 | 65 - 66  | Slot 6 (CTC 3200 - 4100K)      |
|                         |                            | 169 - 173 | 67 - 68  | Slot 5 (Half minus green)      |
|                         |                            | 174 - 178 | 69 - 70  | Slot 4 (Orange 306M)           |
|                         |                            | 179 - 183 | 71 - 72  | Slot 3 (Pink 312)              |
|                         |                            | 184 - 188 | 73 - 74  | Slot 2 (Green 206 IAD)         |
|                         |                            | 189 - 193 | 75 - 76  | Slot 1 (Blue 110)              |
|                         |                            | 194 - 198 | 77 - 78  | Open                           |
|                         |                            |           |          | <i>Continuous rotation</i>     |
|                         |                            | 199 - 219 | 79 - 86  | CW, fast → slow                |
|                         |                            | 220 - 240 | 87 - 94  | CCW, slow → fast               |
|                         |                            |           |          | <i>Random color</i>            |
|                         |                            | 241 - 245 | 95 - 96  | Fast                           |
|                         |                            | 246 - 250 | 97 - 98  | Medium                         |
|                         |                            | 251 - 255 | 99 - 100 | Slow                           |
| -                       | 11                         | 0 - 255   | 0 - 100  | <b>Color Wheel: fine (LSB)</b> |

| 16-bit<br>Basic<br>Mode | 16-bit<br>Extended<br>Mode | DMX Value | Percent  | Function                                                                                                                                                    |
|-------------------------|----------------------------|-----------|----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 7                       | 12                         |           |          | <b>Gobo wheel 1 (rotating gobos): gobo selection, shake, rotation</b><br><i>Indexed gobo: set angle on channel 8 (basic) or 13 (extended)</i>               |
|                         |                            | 0 - 11    | 0 - 4    | Open                                                                                                                                                        |
|                         |                            | 12 - 15   | 4 - 5    | Gobo 1 (Spiral)                                                                                                                                             |
|                         |                            | 16 - 19   | 6 - 7    | Gobo 2 (Radial Circles)                                                                                                                                     |
|                         |                            | 20 - 23   | 7 - 9    | Gobo 3 (Fused Dichro Red/Yellow)                                                                                                                            |
|                         |                            | 24 - 27   | 9 - 10   | Gobo 4 (Milky Way)                                                                                                                                          |
|                         |                            | 28 - 31   | 11 - 12  | Gobo 5 (Water)                                                                                                                                              |
|                         |                            | 32 - 35   | 12 - 13  | Gobo 6 (Flames)                                                                                                                                             |
|                         |                            |           |          | <i>Select gobo with continuous gobo rotation: set gobo rotation speed on channel 8 (basic) or 13 (extended)</i>                                             |
|                         |                            | 36 - 39   | 14 - 15  | Gobo 1 (Spiral)                                                                                                                                             |
|                         |                            | 40 - 43   | 15 - 16  | Gobo 2 (Radial Circles)                                                                                                                                     |
|                         |                            | 44 - 47   | 17 - 18  | Gobo 3 (Fused Dichro Red/Yellow)                                                                                                                            |
|                         |                            | 48 - 51   | 18 - 20  | Gobo 4 (Milky Way)                                                                                                                                          |
|                         |                            | 52 - 55   | 20 - 21  | Gobo 5 (Water)                                                                                                                                              |
|                         |                            | 56 - 59   | 22 - 23  | Gobo 6 (Flames)                                                                                                                                             |
|                         |                            |           |          | <i>Select gobo with indexed position and shake: set angle on channel 8 (basic) or 13 (extended)</i>                                                         |
|                         |                            | 60 - 71   | 23 - 27  | Gobo 1, slow → fast                                                                                                                                         |
|                         |                            | 72 - 83   | 28 - 32  | Gobo 2, slow → fast                                                                                                                                         |
|                         |                            | 84 - 95   | 33 - 36  | Gobo 3, slow → fast                                                                                                                                         |
|                         |                            | 96 - 107  | 37 - 41  | Gobo 4, slow → fast                                                                                                                                         |
|                         |                            | 108 - 119 | 42 - 46  | Gobo 5, slow → fast                                                                                                                                         |
|                         |                            | 120 - 131 | 47 - 51  | Gobo 6, slow → fast                                                                                                                                         |
|                         |                            |           |          | <i>Select gobo with continuous gobo rotation and shake: set gobo rotation speed on channel 8 (basic) or 13 (extended)</i>                                   |
|                         |                            | 132 - 143 | 52 - 56  | Gobo 6, slow → fast                                                                                                                                         |
|                         |                            | 144 - 155 | 57 - 61  | Gobo 5, slow → fast                                                                                                                                         |
|                         |                            | 156 - 167 | 62 - 65  | Gobo 4, slow → fast                                                                                                                                         |
|                         |                            | 168 - 179 | 66 - 70  | Gobo 3, slow → fast                                                                                                                                         |
|                         |                            | 180 - 191 | 71 - 75  | Gobo 2, slow → fast                                                                                                                                         |
|                         |                            | 192 - 203 | 76 - 80  | Gobo 1, slow → fast                                                                                                                                         |
|                         |                            |           |          | <i>Gobo wheel scroll with continuous gobo rotation: set gobo rotation speed on channel 8 (basic) or 13 (extended)</i>                                       |
|                         |                            | 204 - 229 | 81 - 90  | CW scroll, slow → fast                                                                                                                                      |
|                         |                            | 230 - 255 | 91 - 100 | CCW scroll, fast → slow                                                                                                                                     |
| 8                       | 13                         |           |          | <b>Rotating gobo: indexing, speed (MSB)</b><br><i>If indexed gobo is selected on channel 7 (basic) or 12 (extended)</i><br>Rotating gobo indexing, 0 → 395° |
|                         |                            | 0 - 255   | 0 - 100  |                                                                                                                                                             |
|                         |                            |           |          | <i>If continuous gobo rotation is selected on channel 7 (basic) or 12 (extended)</i>                                                                        |
|                         |                            | 0 - 2     | 0        | No rotation                                                                                                                                                 |
|                         |                            | 3 - 127   | 1 - 50   | CW, slow → fast                                                                                                                                             |
| 9                       | 14                         | 128 - 252 | 51 - 99  | CCW, fast → slow                                                                                                                                            |
|                         |                            | 253 - 255 | 100      | No rotation                                                                                                                                                 |
|                         |                            |           |          | <b>Rotating gobo, fine indexing (LSB)</b><br><i>If indexed gobo is selected on channel 7 (basic) or 12 (extended)</i>                                       |
|                         |                            | 0 - 255   | 0 - 100  |                                                                                                                                                             |

| 16-bit Basic Mode | 16-bit Extended Mode | DMX Value | Percent  | Function                                                                                                                  |
|-------------------|----------------------|-----------|----------|---------------------------------------------------------------------------------------------------------------------------|
| 10                | 15                   |           |          | <b>Gobo wheel 2 (static gobos): gobo selection, wheel scroll, random gobo</b>                                             |
|                   |                      |           |          | <i>Continuous scroll</i>                                                                                                  |
|                   |                      | 0         | 0        | Open                                                                                                                      |
|                   |                      | 0 - 10    | 1 - 3    | Open → slot 1                                                                                                             |
|                   |                      | 11        | 4        | Slot 1 (Crackle)                                                                                                          |
|                   |                      | 12 - 21   | 5 - 7    | Slot 1 → slot 2                                                                                                           |
|                   |                      | 22        | 8        | Slot 2 (Triangles Small)                                                                                                  |
|                   |                      | 23 - 32   | 9 - 12   | Slot 2 → slot 3                                                                                                           |
|                   |                      | 33        | 13       | Slot 3 (Tye Dye)                                                                                                          |
|                   |                      | 34 - 43   | 14 - 16  | Slot 3 → slot 4                                                                                                           |
|                   |                      | 44        | 17       | Slot 4 (Globo)                                                                                                            |
|                   |                      | 45 - 54   | 18 - 21  | Slot 4 → slot 5                                                                                                           |
|                   |                      | 55        | 21       | Slot 5 (Worms)                                                                                                            |
|                   |                      | 56 - 65   | 22 - 25  | Slot 5 → slot 6                                                                                                           |
|                   |                      | 66        | 26       | Slot 6 (Bio)                                                                                                              |
|                   |                      | 67 - 76   | 27 - 29  | Slot 6 → slot 7                                                                                                           |
|                   |                      | 77        | 30       | Slot 7 (Leaf Breakup)                                                                                                     |
|                   |                      | 78 - 87   | 31 - 33  | Slot 7 → slot 8                                                                                                           |
|                   |                      | 88        | 34       | Slot 8 ("Les Mis" Whirl Pool)                                                                                             |
|                   |                      | 89 - 98   | 35 - 38  | Slot 8 → slot 9                                                                                                           |
|                   |                      | 99        | 39       | Slot 9 (Two Tone)                                                                                                         |
|                   |                      | 100 - 109 | 40 - 42  | Slot 9 → open                                                                                                             |
|                   |                      | 110 - 112 | 43       | Open                                                                                                                      |
|                   |                      |           |          | <i>Stepped scroll</i>                                                                                                     |
|                   |                      | 113 - 121 | 44 - 47  | Slot 9 (Two Tone)                                                                                                         |
|                   |                      | 122 - 130 | 48 - 51  | Slot 8 ("Les Mis" Whirl Pool)                                                                                             |
|                   |                      | 131 - 139 | 52 - 54  | Slot 7 (Leaf Breakup)                                                                                                     |
|                   |                      | 140 - 148 | 55 - 58  | Slot 6 (Bio)                                                                                                              |
|                   |                      | 149 - 157 | 59 - 61  | Slot 5 (Worms)                                                                                                            |
|                   |                      | 158 - 166 | 62 - 65  | Slot 4 (Globo)                                                                                                            |
|                   |                      | 167 - 175 | 66 - 69  | Slot 3 (Tye Dye)                                                                                                          |
|                   |                      | 176 - 184 | 70 - 72  | Slot 2 (Triangles Small)                                                                                                  |
|                   |                      | 185 - 193 | 73 - 76  | Slot 1 (Crackle)                                                                                                          |
|                   |                      | 194 - 202 | 77 - 79  | Open                                                                                                                      |
|                   |                      |           |          | <i>Continuous wheel rotation</i>                                                                                          |
|                   |                      | 203 - 221 | 80 - 87  | CW, fast → slow                                                                                                           |
|                   |                      | 222 - 240 | 88 - 94  | CCW, slow → fast                                                                                                          |
|                   |                      |           |          | <i>Random gobo</i>                                                                                                        |
|                   |                      | 241 - 245 | 95 - 96  | Fast                                                                                                                      |
|                   |                      | 246 - 250 | 97 - 98  | Medium                                                                                                                    |
|                   |                      | 251 - 255 | 99 - 100 | Slow                                                                                                                      |
| 11                | 16                   |           |          | <b>Static gobo/color wheel macros, random CMY</b>                                                                         |
|                   |                      | 0 - 15    | 0 - 5    | No macro                                                                                                                  |
|                   |                      | 16 - 55   | 6 - 21   | Static gobo wheel shake, slow → fast                                                                                      |
|                   |                      | 56 - 95   | 22 - 37  | Color wheel shake, slow → fast                                                                                            |
|                   |                      | 96 - 135  | 37 - 53  | Static gobo wheel and color wheel shake, slow → fast                                                                      |
|                   |                      |           |          | <i>Random CMY (set min. or max. limits on channels 3, 4 &amp; 5 (basic) or 4, 6 &amp; 8 (extended))</i>                   |
|                   |                      | 136 - 175 | 54 - 69  | Fast                                                                                                                      |
|                   |                      | 176 - 215 | 70 - 84  | Medium                                                                                                                    |
|                   |                      | 216 - 255 | 85 - 100 | Slow                                                                                                                      |
| 12                | 17                   |           |          | <b>Gobo animation wheel: position and function</b>                                                                        |
|                   |                      | 0 - 9     | 0 - 3    | Open                                                                                                                      |
|                   |                      | 10 - 19   | 4 - 7    | Horizontal indexed position: set indexing on 13 (basic) or 18 (extended)                                                  |
|                   |                      | 20 - 29   | 8 - 11   | Vertical indexed position: set indexing on channel 13 (basic) or 18 (extended)                                            |
|                   |                      | 30 - 39   | 12 - 15  | Horizontal position, continuous rotation: set direction & speed on channel 13 (basic) or 18 (extended)                    |
|                   |                      | 40 - 49   | 16 - 19  | Vertical position, continuous rotation: set direction & speed on channel 13 (basic) or 18 (extended)                      |
|                   |                      | 50 - 139  | 20 - 54  | Indexed angled position, horizontal → vertical: set indexing on channel 13 (basic) or 18 (extended)                       |
|                   |                      | 140 - 229 | 55 - 89  | Angled position, vertical → horizontal, continuous rotation: set direction & speed on channel 13 (basic) or 18 (extended) |
|                   |                      | 230 - 255 | 90 - 100 | Open                                                                                                                      |

| 16-bit<br>Basic<br>Mode | 16-bit<br>Extended<br>Mode | DMX Value | Percent  | Function                                                                                                                                                                                                 |
|-------------------------|----------------------------|-----------|----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>13</b>               | <b>18</b>                  | 0 - 255   | 0 - 100  | <b>Gobo animation wheel: indexed angled position, rotation direction and speed</b><br><i>If indexed angled position is selected on channel 12 (basic) or 17 (extended)</i><br>Indexed angle, min. → max. |
|                         |                            | 0 - 2     | 0        | <i>Continuous rotation: set angle on channel 12 (basic) or 17 (extended)</i><br>No rotation                                                                                                              |
|                         |                            | 3 - 127   | 1 - 50   | CCW, slow → fast                                                                                                                                                                                         |
|                         |                            | 128 - 252 | 51 - 99  | CW, fast → slow                                                                                                                                                                                          |
|                         |                            | 253 - 255 | 100      | No rotation                                                                                                                                                                                              |
| <b>14</b>               | <b>19</b>                  | 0 - 19    | 0 - 7    | <b>Prism</b><br>Prism off                                                                                                                                                                                |
|                         |                            | 20 - 79   | 8 - 31   | Prism on, CCW rotation, fast → slow                                                                                                                                                                      |
|                         |                            | 80 - 89   | 31 - 35  | Prism on, no rotation                                                                                                                                                                                    |
|                         |                            | 90 - 149  | 35 - 58  | Prism on, CW rotation, slow → fast                                                                                                                                                                       |
|                         |                            | 150 - 255 | 59 - 100 | Prism off                                                                                                                                                                                                |
| <b>15</b>               | <b>20</b>                  | 0 - 199   | 0 - 77   | <b>Iris (MSB)</b><br>Open → closed                                                                                                                                                                       |
|                         |                            | 200 - 215 | 78 - 84  | Closed                                                                                                                                                                                                   |
|                         |                            | 216 - 229 | 85 - 89  | Opening pulse, fast → slow                                                                                                                                                                               |
|                         |                            | 230 - 243 | 90 - 94  | Closing pulse, fast → slow                                                                                                                                                                               |
|                         |                            | 244 - 246 | 95 - 96  | Random opening pulse, fast                                                                                                                                                                               |
|                         |                            | 247 - 249 | 97       | Random opening pulse, slow                                                                                                                                                                               |
|                         |                            | 250 - 252 | 98 - 99  | Random closing pulse, fast                                                                                                                                                                               |
|                         |                            | 253 - 255 | 100      | Random closing pulse, slow                                                                                                                                                                               |
| -                       | <b>21</b>                  | 0 - 255   | 0 - 100  | <b>Iris, fine (LSB)</b>                                                                                                                                                                                  |
| <b>16</b>               | <b>22</b>                  | 0 - 255   | 0 - 100  | <b>Focus (MSB)</b><br>Infinity → near                                                                                                                                                                    |
|                         |                            | 0 - 255   | 0 - 100  | <b>Focus, fine (LSB)</b>                                                                                                                                                                                 |
| <b>17</b>               | <b>24</b>                  | 0 - 255   | 0 - 100  | <b>Zoom (MSB)</b><br>Flood → spot                                                                                                                                                                        |
|                         |                            | 0 - 255   | 0 - 100  | <b>Zoom, fine (LSB)</b>                                                                                                                                                                                  |
| <b>18</b>               | <b>26</b>                  | 0 - 255   | 0 - 100  | <b>Pan (MSB)</b><br>Left → right (128 = neutral)                                                                                                                                                         |
| <b>19</b>               | <b>27</b>                  | 0 - 255   | 0 - 100  | <b>Pan, fine (LSB)</b>                                                                                                                                                                                   |
| <b>20</b>               | <b>28</b>                  | 0 - 255   | 0 - 100  | <b>Tilt (MSB)</b><br>Left → right (128 = neutral)                                                                                                                                                        |
| <b>21</b>               | <b>29</b>                  | 0 - 255   | 0 - 100  | <b>Tilt, fine (LSB)</b>                                                                                                                                                                                  |
| <b>22</b>               | <b>30</b>                  | 0 - 2     | 0 - 1    | <b>Pan/tilt speed</b><br>Tracking                                                                                                                                                                        |
|                         |                            | 3 - 242   | 1 - 95   | Fast → slow (vector control)                                                                                                                                                                             |
|                         |                            | 243 - 245 | 96       | Tracking, <i>PTSP = SLOW</i> (menu override)                                                                                                                                                             |
|                         |                            | 246 - 248 | 96 - 97  | Tracking, <i>PTSP = NORM</i> (menu override)                                                                                                                                                             |
|                         |                            | 249 - 251 | 98       | Tracking, <i>PTSP = FAST</i> (menu override)                                                                                                                                                             |
|                         |                            | 252 - 255 | 99 - 100 | Blackout while moving                                                                                                                                                                                    |

| 16-bit<br>Basic<br>Mode | 16-bit<br>Extended<br>Mode | DMX Value | Percent  | Function                                                                                                          |
|-------------------------|----------------------------|-----------|----------|-------------------------------------------------------------------------------------------------------------------|
| <b>23</b>               | <b>31</b>                  |           |          | <b>Effects speed</b><br><i>Dimmer, CMY, animation wheel rotation, animation wheel angle, iris, zoom and focus</i> |
|                         |                            | 0 - 2     | 0 - 1    | Tracking                                                                                                          |
|                         |                            | 3 - 245   | 1 - 96   | Fast → slow                                                                                                       |
|                         |                            | 246 - 251 | 96 - 98  | Tracking                                                                                                          |
|                         |                            | 252 - 255 | 99 - 100 | Maximum speed                                                                                                     |
|                         |                            |           |          | <i>Color wheel</i>                                                                                                |
|                         |                            | 0 - 2     | 0 - 1    | Tracking                                                                                                          |
|                         |                            | 3 - 245   | 1 - 96   | Speed, fast → slow                                                                                                |
|                         |                            | 246 - 248 | 96 - 97  | Tracking, <i>SCUT</i> = <i>OFF</i> (menu override)                                                                |
|                         |                            | 249 - 251 | 98       | Tracking, <i>SCUT</i> = <i>ON</i> (menu override)                                                                 |
|                         |                            | 252 - 255 | 99 - 100 | Blackout while moving                                                                                             |
|                         |                            |           |          | <i>Gobo selection, wheels 1 and 2</i>                                                                             |
|                         |                            | 0 - 245   | 0 - 96   | Normal (no blackout)                                                                                              |
|                         |                            | 246 - 248 | 96 - 97  | Normal, <i>SCUT</i> = <i>OFF</i> (menu override)                                                                  |
|                         |                            | 249 - 251 | 98       | Normal, <i>SCUT</i> = <i>ON</i> (menu override)                                                                   |
|                         |                            | 252 - 255 | 99 - 100 | Blackout while moving                                                                                             |
|                         |                            |           |          | <i>Gobo indexing, wheels 1 and 2</i>                                                                              |
|                         |                            | 0 - 2     | 0 - 1    | Tracking mode                                                                                                     |
|                         |                            | 3 - 245   | 1 - 96   | Fast → slow                                                                                                       |
|                         |                            | 246 - 251 | 96 - 98  | Tracking                                                                                                          |
|                         |                            | 252 - 255 | 99 - 100 | Blackout while moving                                                                                             |
|                         |                            |           |          | <i>Prism</i>                                                                                                      |
|                         |                            | 0 - 251   | 0 - 98   | Normal (no blackout)                                                                                              |
|                         |                            | 252 - 255 | 99 - 100 | Blackout while moving                                                                                             |

# Control menu

| Menu        | Item        | Options                                                                 | Notes (Default settings in bold print)                                                                                                  |
|-------------|-------------|-------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| <i>ADDR</i> |             | <b>1 – 490</b><br>(16-bit basic)<br><b>1 – 482</b><br>(16-bit extended) | DMX address (new fixtures are supplied with address set to <b>1</b> )                                                                   |
| <i>PSET</i> |             | <b>16BT</b>                                                             | <b>16-bit basic DMX mode</b> with 2-channel (coarse and fine) control of gobo rotation, pan, and tilt                                   |
|             |             | <b>16EX</b>                                                             | 16-bit extended DMX mode with basic mode features plus fine control of dimmer, cyan, magenta, yellow, color wheel, iris, focus and zoom |
| <i>PATI</i> | <i>SWAP</i> | <i>OFF</i>                                                              | <b>Normal pan and tilt control</b>                                                                                                      |
|             |             | <i>ON</i>                                                               | Map DMX pan control to tilt channel and vice versa                                                                                      |
|             | <i>PINV</i> | <i>OFF</i>                                                              | <b>Normal pan control: left → right</b>                                                                                                 |
|             |             | <i>ON</i>                                                               | Reverse DMX pan control: right → left                                                                                                   |
|             | <i>TINV</i> | <i>OFF</i>                                                              | <b>Normal tilt control: up → down</b>                                                                                                   |
|             |             | <i>ON</i>                                                               | Reverse DMX tilt control, down → up                                                                                                     |
| <i>PTSP</i> |             | <i>NORM</i>                                                             | <b>Normal pan/tilt speed</b>                                                                                                            |
|             |             | <i>FAST</i>                                                             | Optimize pan/tilt movement for speed                                                                                                    |
|             |             | <i>SLOW</i>                                                             | Optimize pan/tilt movement for smoothness                                                                                               |
| <i>EFSP</i> |             | <i>NORM</i>                                                             | <b>Normal effects speed</b>                                                                                                             |
|             |             | <i>FAST</i>                                                             | Optimize effects movement for speed                                                                                                     |
|             |             | <i>SLOW</i>                                                             | Optimize effects movement for smoothness                                                                                                |
|             |             | <i>PTSS</i>                                                             | Pan/tilt speed slave: effects speed copies the pan/tilt speed set via the control menu or via DMX                                       |
| <i>STUD</i> |             | <i>OFF</i>                                                              | <b>Optimize effects for speed</b>                                                                                                       |
|             |             | <i>ON</i>                                                               | Optimize effects for silence (studio mode)                                                                                              |
| <i>PERS</i> | <i>DISP</i> | <i>ON</i>                                                               | <b>Display remains on</b>                                                                                                               |
|             |             | <i>2 MN</i>                                                             | Display extinguishes 2 minutes after last key press                                                                                     |
|             |             | <i>10MN</i>                                                             | Display extinguishes 10 minutes after last key press                                                                                    |
|             | <i>DINT</i> | <i>AUTO</i>                                                             | <b>Display adjusts automatically for ambient light level</b>                                                                            |
|             |             | <i>100 – 10</i>                                                         | Adjust display intensity manually                                                                                                       |
|             | <i>DLOF</i> | <i>OFF</i>                                                              | <b>Disable lamp off via DMX</b>                                                                                                         |
|             |             | <i>ON</i>                                                               | Enable lamp off via DMX                                                                                                                 |
|             | <i>DRES</i> | <i>ON</i>                                                               | <b>Enable reset via DMX</b>                                                                                                             |
|             |             | <i>OFF</i>                                                              | Disable reset via DMX                                                                                                                   |
|             |             | <i>5SEC</i>                                                             | Enable reset via DMX when reset command is held for 5 seconds                                                                           |
|             | <i>ALON</i> | <i>OFF</i>                                                              | <b>No automatic lamp strike</b>                                                                                                         |
|             |             | <i>ON</i>                                                               | Lamp strikes automatically within 90 seconds of power on                                                                                |
|             |             | <i>DMX</i>                                                              | Lamp strikes if DMX is present, douses after 15 mins. without DMX                                                                       |
|             | <i>SCUT</i> | <i>ON</i>                                                               | <b>Gobo and color wheels turn shortest distance (across open)</b>                                                                       |
|             |             | <i>OFF</i>                                                              | Gobo and color wheels do not cross open                                                                                                 |
|             | <i>DICU</i> | <i>DIM 1</i>                                                            | <b>Dimmer curve simulates tungsten incandescent bulb characteristics</b>                                                                |
|             |             | <i>DIM 2</i>                                                            | Near-linear dimmer curve                                                                                                                |
|             | <i>CMYB</i> | <i>OFF</i>                                                              | <b>Disable CMY blackout</b>                                                                                                             |
|             |             | <i>ON</i>                                                               | Enable CMY blackout                                                                                                                     |
|             | <i>IRIB</i> | <i>OFF</i>                                                              | <b>Disable iris blackout</b>                                                                                                            |
|             |             | <i>ON</i>                                                               | Enable iris blackout                                                                                                                    |

Table 2: Control menu

| Menu | Item              | Options | Notes (Default settings in bold print)                                                                                                                                                          |
|------|-------------------|---------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| DFSE | FACT              | LOAD    | Return all settings (except calibrations) to factory defaults                                                                                                                                   |
|      | CUS 1, CUS2, CUS3 | LOAD    | Load custom configuration                                                                                                                                                                       |
|      |                   | SAVE    | Save current custom configuration                                                                                                                                                               |
| INFO | TIME→HRS          | TOTL    | Total hours of operation since manufacture                                                                                                                                                      |
|      |                   | RSET    | Hours of operation since counter reset (see page 13)                                                                                                                                            |
|      | TIME→L HR         | TOTL    | Total hours of operation with lamp on since manufacture                                                                                                                                         |
|      |                   | RSET    | Lamp hours since counter reset (see page 13)                                                                                                                                                    |
|      | TIME→L ST         | TOTL    | Total number of lamp strikes since manufacture                                                                                                                                                  |
|      |                   | RSET    | Number of lamp strikes since counter reset (see page 13)                                                                                                                                        |
|      | TEMP              | HEAD    | Head temperature                                                                                                                                                                                |
|      |                   | LAMP    | Base temperature                                                                                                                                                                                |
|      |                   | PCB     | Circuit board temperature                                                                                                                                                                       |
|      |                   | SMPS    | Switch mode power supply temperature                                                                                                                                                            |
|      | VER               | X.X.X   | CPU firmware version                                                                                                                                                                            |
| DMXL | RATE              |         | DMX transmission speed in packets per second                                                                                                                                                    |
|      | QUAL              |         | Percent of packets received                                                                                                                                                                     |
|      | STCO              |         | Value of the DMX start code                                                                                                                                                                     |
|      | SHUT - EFSP       |         | DMX value (0 - 255) received on each channel<br>Values for fine control channels (indicated with <b>F</b> in the display) can only be viewed if available in the DMX mode the fixture is set to |

**Table 2: Control menu**

| Menu | Item  | Options       | Notes (Default settings in bold print)                             |
|------|-------|---------------|--------------------------------------------------------------------|
| MAN  | RST   |               | Reset fixture                                                      |
|      | L ON  |               | Lamp on                                                            |
|      | L OFF |               | Lamp off                                                           |
|      | SHUT  | OPEN          | Open shutter                                                       |
|      |       | CLOS          | Close shutter                                                      |
|      |       | STRF          | Fast strobe                                                        |
|      |       | STRM          | Medium strobe                                                      |
|      |       | STRS          | Slow strobe                                                        |
|      | DIM   | 0 – 255       | Dimmer                                                             |
|      | CYAN  | 0 – 255       | Cyan                                                               |
|      | MAG   | 0 – 255       | Magenta                                                            |
|      | YEL   | 0 – 255       | Yellow                                                             |
|      | COL   | OPEN          | Color wheel: open position                                         |
|      |       | C 1 – C8      | Color wheel: filters 1-8                                           |
|      |       | CW F – CCWS   | Color wheel continuous rotation: CW and CCW; fast, medium and slow |
|      |       | RND F – RND S | Color wheel random rotation: fast, medium and slow                 |
|      | GOB 1 | OPEN          | Gobo wheel 1 (rotating gobo wheel): open position                  |
|      |       | G 1 I – G6 I  | Rotating gobos 1 - 6: indexed position                             |
|      |       | G 1 R – G6 R  | Rotating gobos 1 - 6: continuous rotation                          |
|      |       | G 1RS – G6RS  | Rotating gobos 1 - 6: rotation and shake                           |
|      |       | CW F – CCWS   | Gobo wheel 1: scroll CW and CCW; fast, medium and slow             |
|      | RG 1  | 0 – 255       | Rotating gobo wheel: scroll                                        |
|      | RG 1F | 0 – 255       | Rotating gobo wheel: scroll (fine)                                 |
|      | GOB2  | OPEN          | Gobo wheel 2 (static gobo wheel): open position                    |
|      |       | G 1 – G9      | Static gobos 1 - 9                                                 |
|      |       | CW F – CCWS   | Gobo wheel 2 scroll: CW and CCW; fast, medium, slow and random     |
|      |       | RND F – RND S | Gobo wheel 2 random scroll: fast, medium and slow                  |
|      | GOMA  | NONE – MAC 3  | Gobo macros 1 - 3                                                  |
|      | ANIP  | OPEN          | Animation wheel open position                                      |
|      |       | HP I          | Animation wheel horizontal position (indexing)                     |
|      |       | V P I         | Animation wheel vertical position (indexing)                       |
|      |       | HP R          | Animation wheel horizontal position (rotation)                     |
|      |       | V P R         | Animation wheel vertical position (rotation)                       |
|      |       | SPI 1 – SPI 4 | Animation wheel angled position 1-4 (indexing)                     |
|      |       | SPR 1 – SPR 4 | Animation wheel angled position 4-1 (rotation)                     |
|      | ANIR  | 0 – 255       | Animation wheel position (indexing) or speed (rotation)            |
|      | PRIS  | OFF           | Prism off                                                          |
|      |       | ON            | Prism on, no rotation                                              |
|      |       | CW F – CCWS   | Prism on: rotation CW and CCW; fast, medium and slow               |

Table 2: Control menu

| Menu                                                                | Item                        | Options          | Notes (Default settings in bold print)                                                   |
|---------------------------------------------------------------------|-----------------------------|------------------|------------------------------------------------------------------------------------------|
| MAN<br>(cont.)                                                      | IRIS                        | <b>0- &gt; C</b> | Iris diameter: Press [Enter], then use up and down arrows to select a value from 0 - 200 |
|                                                                     |                             | <b>CLS</b>       | Iris closed                                                                              |
|                                                                     |                             | <b>PLOF</b>      | Fast opening pulse                                                                       |
|                                                                     |                             | <b>PLOS</b>      | Slow opening pulse                                                                       |
|                                                                     |                             | <b>PLCF</b>      | Fast closing pulse                                                                       |
|                                                                     |                             | <b>PLCS</b>      | Slow closing pulse                                                                       |
|                                                                     |                             | <b>RDOF</b>      | Fast random opening pulse                                                                |
|                                                                     |                             | <b>RDOS</b>      | Slow random opening pulse                                                                |
|                                                                     |                             | <b>RDCF</b>      | Fast random closing pulse                                                                |
|                                                                     |                             | <b>RDCS</b>      | Slow random closing pulse                                                                |
|                                                                     | <b>FOC</b>                  | <b>0- 255</b>    | Focus position                                                                           |
|                                                                     | <b>ZOOM</b>                 | <b>0- 255</b>    | Zoom position                                                                            |
|                                                                     | <b>PAN</b>                  | <b>0- 255</b>    | Pan position                                                                             |
|                                                                     | <b>PANF</b>                 | <b>0- 255</b>    | Pan position (fine)                                                                      |
|                                                                     | <b>TILT</b>                 | <b>0- 255</b>    | Tilt position                                                                            |
|                                                                     | <b>TLTF</b>                 | <b>0- 255</b>    | Tilt position (fine)                                                                     |
| <b>TSEQ</b>                                                         |                             | <b>RUN</b>       | Run a general test of all effects                                                        |
| UTIL<br>To access this menu, hold [Enter] pressed for a few seconds | <b>FEBA</b>                 | <b>ON</b>        | <b>Enable pan/tilt position correction system. See page 14</b>                           |
|                                                                     |                             | <b>OFF</b>       | Disable pan/tilt feedback. Setting not saved                                             |
|                                                                     | <b>EFFB</b>                 | <b>ON</b>        | <b>Enable position feedback from rotating effects. See page 14</b>                       |
|                                                                     |                             | <b>OFF</b>       | Disable position feedback from rotating effects. Setting not saved                       |
|                                                                     | <b>ADJ</b>                  |                  | <b>See "Adjustment submenu" on page 39</b>                                               |
|                                                                     | <b>CAL</b><br>(OF = offset) | <b>P OF</b>      | Pan calibration (adjustment range: 1 - 255)                                              |
|                                                                     |                             | <b>T OF</b>      | Tilt calibration (adjustment range: 70 - 186)                                            |
|                                                                     |                             | <b>D OF</b>      | Dimmer calibration (adjustment range: 90 - 170)                                          |
|                                                                     |                             | <b>C OF</b>      | Cyan calibration (adjustment range: 1 - 255)                                             |
|                                                                     |                             | <b>M OF</b>      | Magenta calibration (adjustment range: 1 - 255)                                          |
|                                                                     |                             | <b>Y OF</b>      | Yellow calibration (adjustment range: 1 - 255)                                           |
|                                                                     |                             | <b>COOF</b>      | Color wheel calibration (adjustment range: 118 - 138)                                    |
|                                                                     |                             | <b>G 1OF</b>     | Gobo wheel 1 (rotating gobos) calibration (adjustment range: 118 - 138)                  |
|                                                                     |                             | <b>G2OF</b>      | Gobo wheel 2 (static gobos) calibration (adjustment range: 118 - 138)                    |
|                                                                     |                             | <b>FOOF</b>      | Focus calibration (adjustment range: 98 - 158)                                           |
|                                                                     |                             | <b>ZOOF</b>      | Zoom calibration (adjustment range: 98 - 158)                                            |
|                                                                     |                             | <b>IROF</b>      | Iris calibration (adjustment range: 128 - 255)                                           |
|                                                                     |                             | <b>PROF</b>      | Prism calibration (adjustment range: 116 -140)                                           |
|                                                                     | <b>DOOF</b>                 | <b>SURE</b>      | Set all effects to calibration value 128                                                 |
|                                                                     | <b>PCBT</b>                 |                  | PCB test: for service use only                                                           |
|                                                                     | <b>FANS</b>                 | <b>FULL</b>      | <b>Cooling fans: full speed</b>                                                          |
|                                                                     |                             | <b>REG</b>       | Cooling fans: temperature regulated                                                      |
|                                                                     | <b>UPLD</b>                 | <b>SURE</b>      | Manually set fixture to software update mode                                             |

Table 2: Control menu

# Adjustment submenu

The *UTIL→ADJ* menu is for use by service technicians when performing adjustments.

| Menu         | Item        | Item         | Options                | Notes                                                                                    |
|--------------|-------------|--------------|------------------------|------------------------------------------------------------------------------------------|
| <i>RST</i>   |             |              |                        | Reset fixture                                                                            |
| <i>L ON</i>  |             |              |                        | Strike lamp                                                                              |
| <i>L OFF</i> |             |              |                        | Douse lamp                                                                               |
| <i>HEAD</i>  | <i>DIMM</i> | <i>DIM</i>   | <i>ADJ</i>             | Dimmer blades against stop                                                               |
|              |             |              | <i>CLOS</i>            | Close dimmer                                                                             |
|              |             |              | <i>OPEN</i>            | Dimmer to open position                                                                  |
|              |             |              | <i>ST S</i>            | Strobe slow                                                                              |
|              |             |              | <i>ST M</i>            | Strobe medium                                                                            |
|              |             |              | <i>ST F</i>            | Strobe fast                                                                              |
|              |             | <i>CYAN</i>  | <i>ON S</i>            | Cyan flag on switch (retracted position)                                                 |
|              |             |              | <i>MIN</i>             | Minimum cyan position                                                                    |
|              |             |              | <i>MAX</i>             | Maximum cyan position                                                                    |
|              |             | <i>MAG</i>   | <i>ON S</i>            | Magenta flag on switch (retracted position)                                              |
|              |             |              | <i>MIN</i>             | Minimum magenta position                                                                 |
|              |             |              | <i>MAX</i>             | Maximum magenta position                                                                 |
|              |             | <i>YEL</i>   | <i>ON S</i>            | Yellow flag on switch (retracted position)                                               |
|              |             |              | <i>MIN</i>             | Minimum yellow position                                                                  |
|              |             |              | <i>MAX</i>             | Maximum yellow position                                                                  |
|              |             | <i>TEST</i>  |                        | Test dimmer and CMY effects                                                              |
|              | <i>EFFM</i> | <i>TOOL</i>  |                        | For service use only                                                                     |
|              |             | <i>COL</i>   | <i>OPEN - CB</i>       | Color wheel full positions                                                               |
|              |             |              | <i>CW F - RND S</i>    | Color wheel rotation                                                                     |
|              |             | <i>GOB 1</i> | <i>OPEN - GG I</i>     | Gobo wheel 1 (rotating gobos) gobo selection (indexing)                                  |
|              |             |              | <i>G 1 R - GG R</i>    | Gobo selection and rotation                                                              |
|              |             |              | <i>G 1 R S - GGR S</i> | Gobo selection, rotation and shake                                                       |
|              |             |              | <i>CW F - CCWS</i>     | Gobo wheel 1 scroll: speed and direction                                                 |
|              |             | <i>GOB 2</i> | <i>OPEN - G9</i>       | Gobo wheel 2 (static gobos) gobo selection (indexing)                                    |
|              |             |              | <i>CW F - RND S</i>    | Gobo wheel 2 scroll: speed and direction                                                 |
|              |             | <i>ANIW</i>  | <i>OPEN</i>            | Animation wheel open                                                                     |
|              |             |              | <i>HP I - VP R</i>     | Animation wheel horizontal/vertical position, indexed/rotation                           |
|              |             |              | <i>SPI 1 - SPI 4</i>   | Animation wheel angled position 1-4, indexed                                             |
|              |             |              | <i>SPR 1 - SPR 4</i>   | Animation wheel angled position 1-4, rotation                                            |
|              |             | <i>IRIS</i>  | <i>O - &gt; C</i>      | Iris diameter: press [Enter], then use up and down arrows to select a value from 0 - 200 |
|              |             |              | <i>CLS</i>             | Iris closed                                                                              |
|              |             |              | <i>PLOF - PLCS</i>     | Pulse: opening fast - closing slow                                                       |
|              |             |              | <i>RPOF - RPCS</i>     | Random pulse: opening fast - closing slow                                                |
|              |             | <i>TEST</i>  |                        | Test all effects in effects module                                                       |

Table 3: Adjustment submenu

| Menu          | Item | Item | Options     | Notes                                          |
|---------------|------|------|-------------|------------------------------------------------|
| HEAD<br>cont. | ZFPM | TOOL |             | For factory use                                |
|               |      | PRIS | OFF         | Prism, zoom, and focus to adjustment positions |
|               |      |      | DN          | Prism in                                       |
|               |      |      | CW F – CCWS | Prism rotation: direction and speed            |
|               |      | ZOOM | ZI S – ZD F | Zoom: in/out, speed                            |
|               |      | ZFPT | POUT        | Zoom/focus/prism test: prism out               |
|               |      |      | PIN         | Zoom/focus/prism test: prism in                |
|               |      | FOCU | FI S – FD F | Focus: near/far, speed                         |
| PATI          |      | TEST |             | Test zoom, focus, and prism                    |
|               |      | NEUT |             | Move pan and tilt to neutral positions         |
|               |      | PNTD |             | Pan neutral, tilt down                         |
|               |      | PNTU |             | Pan neutral, tilt up                           |
|               |      | PLTN |             | Pan left, tilt neutral                         |
|               |      | PRTN |             | Pan right, tilt neutral                        |
|               |      | PLTD |             | Pan left, tilt down                            |
|               |      | PRTU |             | Pan right, tilt up                             |

Table 3: Adjustment submenu

# Control menu shortcuts

The following shortcuts are available using the buttons in the MAC 700 Profile control panel:

| Shortcut                                     | Function             |
|----------------------------------------------|----------------------|
| Hold [Menu] and press [Up]                   | Resets fixture       |
| Hold [Enter] and press [Up]                  | Strikes lamp         |
| Hold [Enter] and press [Down]                | Douses lamp          |
| Hold [Menu] and [Enter] while applying power | Freezes pan and tilt |
| Hold [Up] and press [Down]                   | Invert display       |

Table 4: Control menu shortcuts

# Service messages

|                                                   |                     |                                                           |
|---------------------------------------------------|---------------------|-----------------------------------------------------------|
| MSG<br>(when<br>service<br>message<br>LED is lit) | REPLACE LAMP        | Displayed when lamp hours exceed average life (750 hours) |
|                                                   | FIXTURE OVERHEATING | Displayed if head temperature exceeds 85° C (185° F)      |

Table 5: Service messages

# Display messages

| Message                                                                                                                                                                                                                                                              | Appears when...                                                                                                                                                                                                                               | What to do                                                                                                                             |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|
| <b>RST</b> (Reset)                                                                                                                                                                                                                                                   | ... the fixture is indexing effects at startup.                                                                                                                                                                                               | Wait for reset to complete.                                                                                                            |
| <b>SRST</b> (Serial reset)                                                                                                                                                                                                                                           | ... the fixture has received a reset command.                                                                                                                                                                                                 | Wait for reset to complete. Note that you can set <b>PERS</b> → <b>DRES</b> to <b>OFF</b> to prevent accidental DMX reset commands.    |
| <b>HOME</b>                                                                                                                                                                                                                                                          | ... the effects have been indexed and are moving to their default positions.                                                                                                                                                                  | Wait a few moments.                                                                                                                    |
| <b>DOOR</b>                                                                                                                                                                                                                                                          | ...the lamp access cover is not fully closed.                                                                                                                                                                                                 | Check that the lamp access cover is locked in place.                                                                                   |
| <b>LERR</b> (Lamp error)                                                                                                                                                                                                                                             | ... the lamp does not ignite within 30 seconds of receiving the 'Lamp ON' command. Likely reasons are a missing or defective lamp, or insufficient AC voltage.                                                                                | Check the lamp. Check that the voltage and frequency settings match the local supply.                                                  |
| <b>MERR</b> (Memory error)                                                                                                                                                                                                                                           | ...the EEPROM memory cannot be read.                                                                                                                                                                                                          | Contact Martin service personnel for assistance.                                                                                       |
| <b>CSEr</b> (Check-sum error)                                                                                                                                                                                                                                        | ...a software upload is unsuccessful.                                                                                                                                                                                                         | Reload software.                                                                                                                       |
|                                                                                                                                                                                                                                                                      | ... there is no communication between the control panel and motherboard. This readout appears briefly when switching on the fixture.                                                                                                          | Check fuses and replace accordingly. Check that cable between control panel and motherboard is connected properly. Reinstall software. |
| <b>SHER</b> (Short error)                                                                                                                                                                                                                                            | ... the fixture detects the lamp is ON but no 'Lamp ON' command has been received. This can occur if the lamp relay is stuck or if the lamp-power feedback circuit fails. The fixture may be operated but remote lamp on/off may be affected. | Contact Martin service personnel for assistance.                                                                                       |
| <b>BTER</b> (Base temperature sensor error)<br><b>HTER</b> (Head temperature sensor error)<br><b>LTER</b> (Lamp temperature sensor error)<br><b>ETER</b> (Switchmode/ballast side temperature sensor error)                                                          | ...there is a malfunction in the temperature sensing circuit.                                                                                                                                                                                 | Contact Martin service personnel for assistance.                                                                                       |
| <b>FBER</b> (Feedback error pan)<br><b>FRET</b> (Feedback error tilt)<br><b>FBER</b> (Feedback error pan/tilt)                                                                                                                                                       | ...there is a malfunction in the optical pan/tilt monitoring circuit (e.g. sensor defective). After a time-out, the effect in question stops in a random position.                                                                            | Reset fixture. Contact Martin service personnel if problem continues.                                                                  |
| <b>PRER</b> (Pan time-out)<br><b>TIER</b> (Tilt time-out)<br><b>FDER</b> (Focus time-out)<br><b>ZDER</b> (Zoom time-out)                                                                                                                                             | ...there is a malfunction in the electric indexing circuit for pan, tilt, focus or zoom. The fixture will, after the time-out, establish a mechanical stop, and continue to work normally.                                                    | Reset fixture. Contact Martin service personnel if problem continues.                                                                  |
| <b>CDER</b> (Color wheel time-out)<br><b>G1ER</b> (Gobo wheel 1 time-out)<br><b>G2ER</b> (Gobo wheel 2 time-out)<br><b>RGER</b> (Gobo wheel rotation time-out)<br><b>APER</b> (Animation wheel position time-out)<br><b>ARER</b> (Animation wheel rotation time-out) | ...there is a malfunction in the magnetic-indexing circuit (e.g. sensor defective or magnet missing). After the time-out, the effect in question stops in a random position.                                                                  | Reset fixture. Contact Martin service personnel if problem continues.                                                                  |
| <b>CYER</b> (Cyan time-out)<br><b>MAER</b> (Magenta time-out)<br><b>YEER</b> (Yellow wheel time-out)                                                                                                                                                                 | ...there is a malfunction in the electric indexing circuit for one of the CMY flags.                                                                                                                                                          | Reset fixture. Contact Martin service personnel if problem continues.                                                                  |
| <b>RAME</b>                                                                                                                                                                                                                                                          | ...there is an onboard RAM memory error.                                                                                                                                                                                                      | Contact Martin service personnel for assistance.                                                                                       |
| <b>OPER</b>                                                                                                                                                                                                                                                          | ...there is an onboard programming error.                                                                                                                                                                                                     | Contact Martin service personnel for assistance.                                                                                       |


**Table 6: Display messages**

# Troubleshooting

| Problem                                                                                    | Probable cause(s)                                                            | Remedy                                                                                                                                                                                           |
|--------------------------------------------------------------------------------------------|------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| One or more of the fixtures is completely dead.                                            | No power to fixture.                                                         | Check that power is switched on and cables are plugged in.                                                                                                                                       |
|                                                                                            | Primary fuse blown (located near mains inlet).                               | Isolate fixture from power and replace fuse.                                                                                                                                                     |
|                                                                                            | Secondary fuse(s) blown (located on PCBs in base).                           | Isolate fixture from power. Check fuses and replace.                                                                                                                                             |
| Fixtures reset correctly but respond erratically or not at all to the controller.          | Bad data link.                                                               | Inspect connections and cables. Correct poor connections. Repair or replace damaged cables.                                                                                                      |
|                                                                                            | Data link not terminated.                                                    | Insert termination plug in output jack of the last fixture on the link.                                                                                                                          |
|                                                                                            | Incorrect addressing of the fixtures.                                        | Check fixture address and protocol settings.                                                                                                                                                     |
|                                                                                            | One of the fixtures is defective and disturbs data transmission on the link. | Unplug the XLR in and out connectors and connect them directly together to bypass one fixture at a time until normal operation is regained. Have the fixture serviced by a qualified technician. |
|                                                                                            | XLR pin-out on fixtures does not match (pins 2 and 3 reversed).              | Install a phase-reversing cable between the fixtures or swap pins 2 and 3 in the fixture that behaves erratically.                                                                               |
| Time out error after fixture reset.                                                        | Effect requires mechanical adjustment.                                       | Disable effects feedback (page 14). Contact Martin technician for service.                                                                                                                       |
| Mechanical effect loses position.                                                          | Mechanical train requires cleaning, adjustment, or lubrication.              | Contact Martin technician for service.                                                                                                                                                           |
| Lamp fails to strike after turning the fixture off and on again, or after a power failure. | Electronic ballast does not recognize that the lamp is off.                  | Send LAMP OFF command before sending another LAMP ON command. The lamp will then strike. See protocol for override if <i>DLDF</i> is set to <i>OFF</i> .                                         |
| No light and <i>LERR</i> (lamp error) message displayed.                                   | Lamp blown                                                                   | Disconnect fixture and replace lamp.                                                                                                                                                             |
|                                                                                            | Lamp not installed                                                           | Disconnect fixture and install lamp.                                                                                                                                                             |
|                                                                                            | Lamp access safety switch open                                               | Verify that lamp access plate is fully seated and locked in place.                                                                                                                               |
| Lamp cuts out intermittently.                                                              | Fixture is too hot.                                                          | Allow fixture to cool.<br>Clean fixture.<br>Reduce ambient temperature.                                                                                                                          |

**Table 7: Troubleshooting**

# Circuit board connections

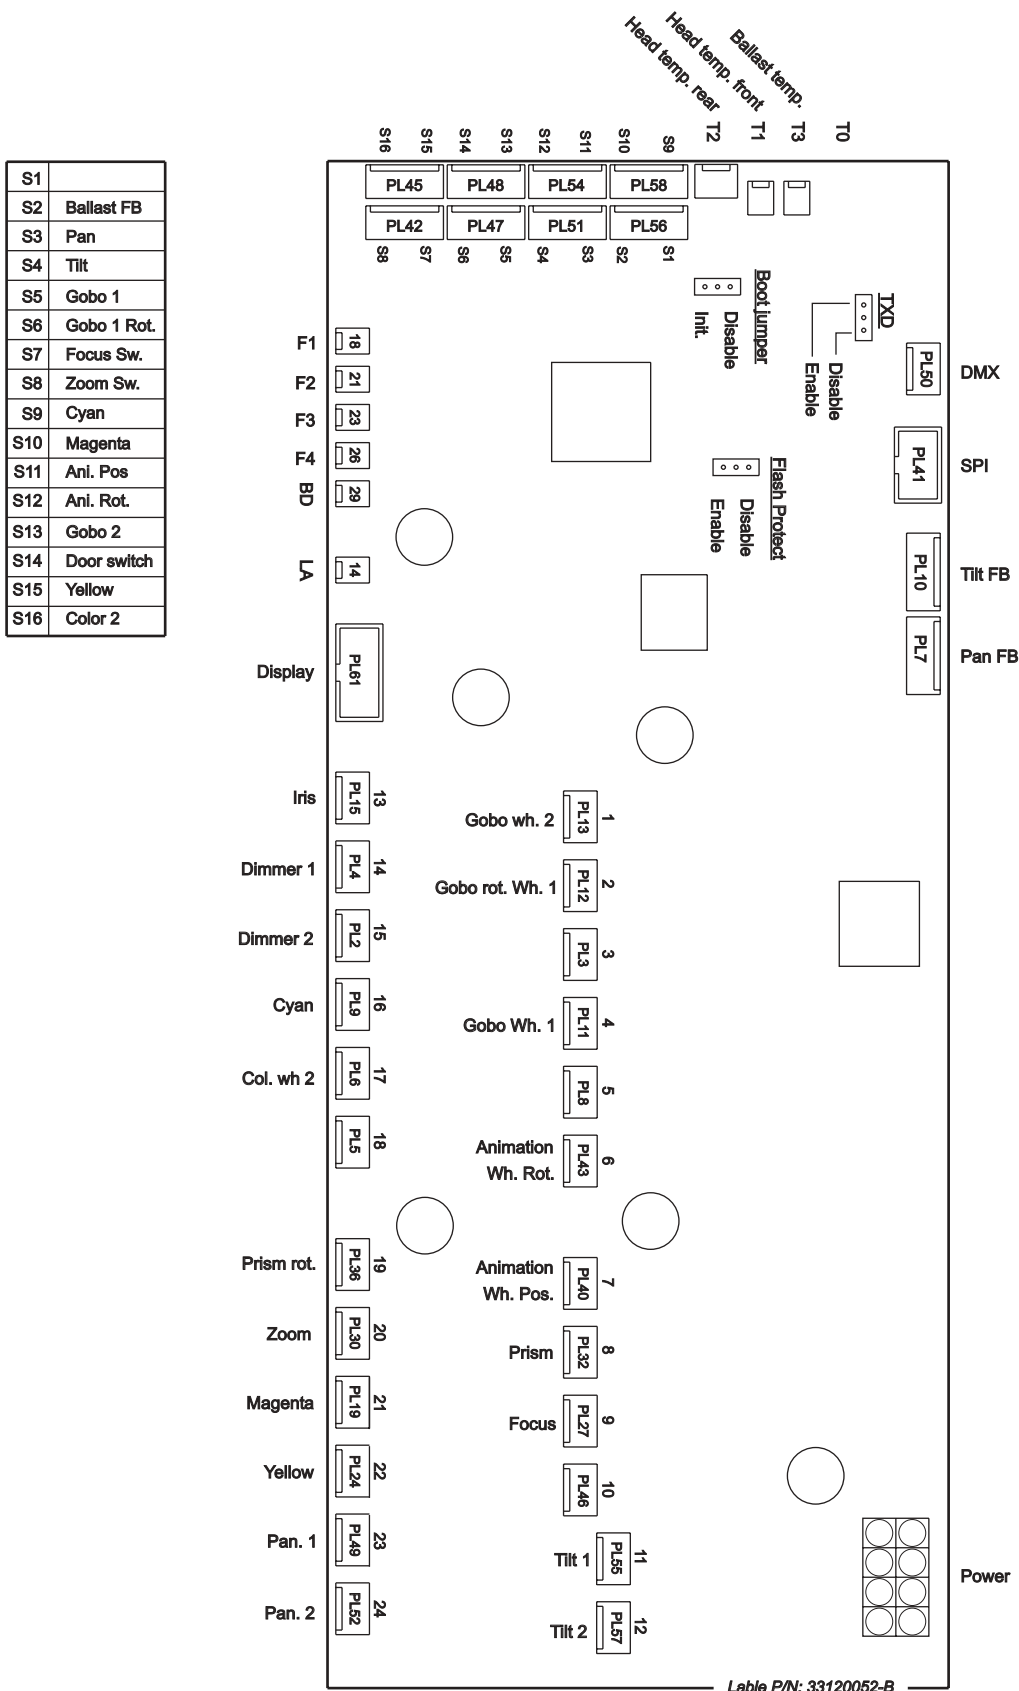

# MAC 700 Profile Specifications

## PHYSICAL

|        |                    |
|--------|--------------------|
| Length | 450 mm (17.7 in)   |
| Width  | 365 mm (14.4 in)   |
| Height | 636 mm (25.0 in)   |
| Weight | 34.5 kg (76.1 lbs) |

## SOURCE

|                 |                                |
|-----------------|--------------------------------|
| Lamp            | 700 W short arc discharge      |
| Base            | Double-ended SFC 10-4 with key |
| Approved models | OSRAM HTI 700/D4/75            |
| Ballast         | electronic                     |

## THERMAL

|                                                                  |                           |
|------------------------------------------------------------------|---------------------------|
| Maximum ambient temperature ( $T_a$ )                            | 40° C (104° F)            |
| Maximum surface temperature                                      | 160° C (320° F)           |
| Low noise cooling with fan speed regulation mode                 |                           |
| Total heat dissipation (calculated, 230 V, 50 Hz / 110 V, 60 Hz) | 3190 BTU/hr / 3429 BTU/hr |

## PHOTOMETRICS

|                         |                                  |
|-------------------------|----------------------------------|
| Measurement conditions  | 230 V, 50 Hz; no effects applied |
| Measurement test source | OSRAM HTI 700/D4/75              |

### Photometrics: minimum spread with diffuser

|                       |              |
|-----------------------|--------------|
| Total output          | 14300 lumens |
| One-tenth peak output | 14300 lumens |
| Cutoff angle          | 16.0°        |
| One-tenth peak angle  | 15.0°        |

### Photometrics: median spread with diffuser

|                       |              |
|-----------------------|--------------|
| Total output          | 14600 lumens |
| One-tenth peak output | 14600 lumens |
| Cutoff angle          | 20.2°        |
| One-tenth peak angle  | 19.4°        |

### Photometrics: maximum spread with diffuser

|                       |              |
|-----------------------|--------------|
| Total output          | 14700 lumens |
| One-tenth peak output | 14700 lumens |
| Cutoff angle          | 30.0°        |
| One-tenth peak angle  | 29.0°        |

### Photometrics: minimum spread without diffuser

|                       |              |
|-----------------------|--------------|
| Total output          | 16200 lumens |
| One-tenth peak output | 16200 lumens |
| Cutoff angle          | 15.8°        |
| One-tenth peak angle  | 15.1°        |

### Photometrics: median spread without diffuser

|                       |              |
|-----------------------|--------------|
| Total output          | 16500 lumens |
| One-tenth peak output | 16500 lumens |
| Cutoff angle          | 20.2°        |
| One-tenth peak angle  | 19.5°        |

### Photometrics: maximum spread without diffuser

|                       |              |
|-----------------------|--------------|
| Total output          | 16700 lumens |
| One-tenth peak output | 16600 lumens |
| Cutoff angle          | 30.6°        |
| One-tenth peak angle  | 29.6°        |

## OPTICS

|                            |                                  |
|----------------------------|----------------------------------|
| Glass cold light reflector |                                  |
| Spread angle               | 14° - 30° (focused on open gobo) |
| Focal length               | 46 - 100 mm                      |

## ELECTRICAL

|                                 |                                     |
|---------------------------------|-------------------------------------|
| AC input                        | 3 m trailing cable w/o cord cap     |
| Operating ranges                | 100-130/200-250 VAC, 50/60 Hz       |
| Power supply                    | auto-ranging electronic switch-mode |
| Main fuse for 200 - 250 V power | 6.3 AT, P/N 05020020                |
| Main fuse for 100 - 130 V power | 15 AT, P/N 05020027                 |

### Typical power and current

|                |                          |
|----------------|--------------------------|
| @ 100 V, 60 Hz | 1019 W, 10.3 A, PF 0.996 |
| @ 120 V, 60 Hz | 988 W, 8.3 A, PF 0.995   |
| @ 208 V, 60 Hz | 949 W, 4.7 A, PF 0.976   |
| @ 230 V, 50 Hz | 944 W, 4.2 A, PF 0.973   |
| @ 240 V, 50 Hz | 940 W, 4.0 A, PF 0.970   |
| @ 250 V, 50 Hz | 940 W, 3.9 A, PF 0.966   |

*V = volts, Hz = hertz, W = watts, A = amps, PF = power factor*

*Note: Allow for a deviation of +/- 10% from typical figures listed above. Measurements made at nominal voltage. Local supply voltages can vary by +/- 10%.*

## CONTROL AND PROGRAMMING

|                        |                                                                        |
|------------------------|------------------------------------------------------------------------|
| Protocol               | USITT DMX-512 (1990)                                                   |
| Control channels       | 23 or 31                                                               |
| Receiver               | Opto-isolated RS-485                                                   |
| Data I/O               | locking 3-pin & 5-pin XLR, pin 1 shield, pin 2 cold (-), pin 3 hot (+) |
| Setting and addressing | LED control panel or MP-2 uploader                                     |
| Movement control       | tracking and vector                                                    |
| Software installation  | serial upload (MUF)                                                    |

## ELECTROMECHANICAL EFFECTS

### Beam effects

High speed replaceable rotating 3 facet prism, 8-bit control  
Motorized iris, 8- or 16-bit control

### Dimmer/shutter

Full-range dimming, 8- or 16-bit control  
Shutter speed: flash variable 2hz to 10hz, 8-bit control

### Color

1 motorized color wheel with 8 replaceable dichroic color filters, plus open, 8- or 16-bit control

### CMY

Cyan: 0-100%, 8- or 16-bit control  
Magenta: 0-100%, 8- or 16-bit control  
Yellow: 0-100%, 8- or 16-bit control

### Pan/tilt

Pan: 540°, 16-bit control  
Tilt: 246°, 16-bit control  
Position correction system

### Gobos

Rotating gobos: 6 positions plus open with continuous and indexed rotation, 16-bit control  
Static gobos: 9 positions plus open, 8-bit control

### Gobo animation wheel

Vertical, horizontal or angled animation effects.  
Indexed and variable speed continuous rotation, 8- or 16-bit control

### Focus

Motorized focus: 2m to infinity, 8- or 16-bit control

### Zoom

14° - 30°, 8- or 16-bit control

## GOBOS

|                        |                                                                                 |
|------------------------|---------------------------------------------------------------------------------|
| Outside diameter       | 27.9 +0/-0.3 mm                                                                 |
| Maximum image diameter | 23 mm                                                                           |
| Maximum thickness      | 1.1 mm in static slots, 4 mm in rotating slots                                  |
| Recommended glass      | high-temperature Borofloat or better with dichroic or enhanced aluminum coating |
| Recommended metal      | 0.5 mm aluminum                                                                 |

## GOBO ANIMATION WHEEL

|                      |                                               |
|----------------------|-----------------------------------------------|
| Outside diameter     | 116 mm +0/-0.25 mm                            |
| Image outer diameter | 112 mm                                        |
| Image inner diameter | 32 mm                                         |
| Construction         | 0.5 mm aluminum or textured glass with magnet |

## APPROVALS



|                 |                                   |
|-----------------|-----------------------------------|
| EU EMC          | EN 55 103-1, EN 55 015, EN 61 547 |
| EU safety       | EN 60598-2-17                     |
| US safety       | ANSI/UL 1573                      |
| Canadian safety | CSA C22.2 NO 166                  |

## CONSTRUCTION

|                            |                                               |
|----------------------------|-----------------------------------------------|
| Housing                    | UV-resistant fiber-reinforced composite shell |
| Colors                     | black                                         |
| Protection factor          | IP 20                                         |
| Shock resistant chassis    |                                               |
| Ergonomic carrying handles |                                               |

## INSTALLATION

|                                             |                           |
|---------------------------------------------|---------------------------|
| Mounting points                             | 2 pairs of 1/4-turn locks |
| Orientation                                 | any                       |
| Minimum distance from illuminated surface   | 1.2 m (48 in.)            |
| Minimum distance from combustible materials | 0.5 m (20 in.)            |

## INCLUDED ITEMS

|                                                               |                                                                        |
|---------------------------------------------------------------|------------------------------------------------------------------------|
| Lamp                                                          | OSRAM HTI 700/D4/75 (installed): P/N 97010212                          |
| Dichroic color filters                                        | 8 (installed)                                                          |
| Gobos                                                         | 14 metal and 1 glass (installed), 5 extra metal gobos and extra spring |
| Gobo animation wheel                                          | Radial breakup (installed): P/N 62325048                               |
| Fuse for use with 200 - 250 V power                           | 6.3 AT fuse (installed): P/N 05020020                                  |
| Fuse for use with 100 -130 V power                            | 15 AT fuse: P/N 05020027                                               |
| 2 omega clamp attachment brackets with quarter-turn fasteners | 2 x P/N 91602001                                                       |
| 3-pin XLR cable, 5m                                           | P/N 11820008                                                           |
| User manual                                                   | P/N 35000137                                                           |

## ACCESSORIES

|                                         |                                                        |
|-----------------------------------------|--------------------------------------------------------|
| Spiral breakup gobo animation wheel     | P/N 62325049                                           |
| Linear breakup gobo animation wheel     | P/N 62325050                                           |
| Coarse tangential gobo animation wheel  | P/N 62325051                                           |
| Cloud breakup gobo animation wheel      | P/N 62325094                                           |
| Elliptical breakup gobo animation wheel | P/N 62325095                                           |
| Half-coupler clamp                      | P/N 91602005                                           |
| G-clamp                                 | P/N 91602003                                           |
| DABS 1 Uploader                         | P/N 91611144                                           |
| MP-2 Uploader                           | P/N 90758420                                           |
| MAC 500/550/700 stock gobos             | see <a href="http://www.martin.com">www.martin.com</a> |

## ORDERING INFORMATION

|                                           |              |
|-------------------------------------------|--------------|
| MAC 700 Profile in cardboard packing case | P/N 90207000 |
| MAC 700 Profile in flight case            | P/N 90207001 |



